



## HiPath 3000 HiPath 5000 RSM

HiPath AllServe, Hicom 150 E/H

## optiPoint 400 economy optiPoint 400 standard

Operating Instructions

# SIEMENS

Global network of innovation




# Before You Begin

These operating instructions describe the telephone optiPoint 400 economy/standard on your HiPath 3000 / 5000 RSM.

They describe all functions you can use from your telephone. You may find that some functions you wish to use are not available on your telephone. This may be due to one of the following reasons:

- The function has not been configured for your telephone - please contact your service personnel.
- Your communications platform does not support this function - please contact your service personnel.

## Important Notes

	Do not operate the telephone in environments where there is a danger of explosions.
	Use only original Siemens accessories! Using other accessories may cause a hazard and will invalidate the warranty and the CE mark.
	Never open the telephone. If you encounter any problems, contact your service personnel.

Never allow the telephone to come into contact with staining or aggressive liquids such as coffee, tea, juice, or soft drinks.

For information on telephone maintenance → page 97.

The information provided in this document contains merely general descriptions or characteristics of performance which in case of actual use do not always apply as described or which may change as a result of further development of the products.

An obligation to provide the respective characteristics shall only exist if expressly agreed in the terms of contract.

## Marks



The device conforms to the EU guideline 1999/5/EG, as attested by the CE mark.



This device has been manufactured in accordance with our certified environmental management system (ISO 14001). This process ensures that energy consumption and the use of primary raw materials are kept to a minimum, thus reducing waste production.

<b>Basic operating instructions</b> . . . . .	<b>8</b>
optiPoint 400 economy/standard control panel . . . . .	8
How to Use these Operating Instructions . . . . .	9
Screen Displays . . . . .	9
Accessing Functions . . . . .	10
... Interactively . . . . .	10
... Via the Program/Service Menu . . . . .	10
... With Function Keys . . . . .	10
Functions You Can Use . . . . .	11
Basic and Enhanced Functions . . . . .	11
Additional Team and Executive/Secretary Functions . . . . .	11
Using the Telephone Efficiently . . . . .	11

 **Basic and Enhanced Functions**

<b>Making and Answering Calls</b> . . . . .	<b>12</b>
Answering a Call With the Handset . . . . .	12
Answering a Call with the Speaker (Speakerphone Mode) . . . . .	12
Open Listening in the Room During a Call . . . . .	13
Switching to Speakerphone Mode . . . . .	14
Switching to the Handset . . . . .	14
Using Call Waiting . . . . .	14
Accepting a Waiting Call (Camp-On) . . . . .	14
Preventing and Allowing Call Waiting (Automatic Camp-On) . . . . .	15
Turning the Call Waiting Tone On and Off . . . . .	15
Accepting a Specific Call for Your Colleague . . . . .	16
Rejecting Calls . . . . .	16
Using Mailboxes . . . . .	17
Accessing the Mailbox . . . . .	17
Using Timed Reminders . . . . .	17
Using the Speakerphone . . . . .	18
Enabling and Disabling Handsfree Answerback . . . . .	18
Answering a Call With a Headset . . . . .	18
Turning Do Not Disturb On and Off . . . . .	19
Turning Ringer Cutoff On and Off . . . . .	19
Trace Call: Identifying Anonymous Callers (Not for U.S.) . . . . .	20
Turning the Microphone On and Off . . . . .	20
Answering Calls from the Entrance Telephone and Opening the Door . . . . .	21
Accepting a Call From an Answering Machine . . . . .	22
Display Number of Waiting Calls and Overload Indication . . . . .	23

**Making Calls .....24**

Off-Hook Dialing ..... 24  
On-Hook Dialing. .... 24  
    En-Bloc Sending / Correcting Numbers ..... 25  
Caller ID Suppression ..... 26  
Talking to Your Colleague With a Speaker Call ..... 26  
Activating Tone Dialing (DTMF Suffix Dialing) ..... 27  
Automatic Connection Setup (Hotline) ..... 27  
Reserve Trunk ..... 28  
Assigning a Station Number (Not for U.S.) ..... 28  
Trunk Flash ..... 29  
Associated Dialing/Dialing Aid ..... 30

**Calling Multiple Parties Simultaneously .....31**

Calling a Second Party (Consultation Hold) ..... 31  
    Switching to the Party on Hold (Toggle) ..... 31  
Conducting a Conference ..... 32  
    Adding Up to Five Parties to the Conference (Initiator Only) ..... 32  
    Checking Which Parties Are in the Conference (Initiator Only) ..... 33  
    Removing Parties From the Conference (Initiator Only) ..... 33  
    Leaving a Conference ..... 33  
    Ending a Conference (Initiator Only) ..... 33  
    Removing the ISDN Central Office Party  
    From the Conference (Only for U.S.) ..... 33  
Transferring a Call ..... 34  
    ...After a Speaker Call (Announcement) in a Group ..... 34  
Parking a Call ..... 35  
    Retrieving a Parked Call ..... 35  
Placing External Calls on Hold ..... 36  
    Picking up (Retrieving) a Held Call ..... 36

**Making Calls to Stored Destinations .....37**

Using a Caller List ..... 37  
    Retrieving the Caller List ..... 37  
    Ending Retrieval ..... 37  
    Displaying the Call Time and Additional Call Information ..... 38  
    Dialing a Station Number from the Caller List ..... 38  
    Removing an Entry from the Caller List ..... 38  
    Saving the Other Party's Station Number in the Caller List (Redial) 38  
Redialing a Number ..... 39  
Dialing a Number From the Internal Directory ..... 40  
Using Repertory Dialing Keys ..... 41  
Using Station and System Speed-Dial Numbers ..... 41

<b>Displaying and Assigning Call Charges</b> .....	<b>42</b>
Displaying Call Charges (Not for U.S.) .....	42
Displaying Call Charges for Another Telephone (Not for U.S.) .....	43
Dialing with Call Charge Assignment .....	44
<b>If You Cannot Reach a Destination</b> .....	<b>45</b>
Using Callback .....	45
Storing a Callback .....	45
Answering a Callback .....	45
Checking and Canceling a Saved Callback .....	45
Call Waiting (Camp-On) .....	46
Busy Override - Joining a Call in Progress .....	47
<b>Telephone Settings</b> .....	<b>48</b>
Adjusting the Ring Volume .....	48
Adjusting the Ring Tone .....	48
Adjusting the Attention Ring Volume .....	48
Adjusting the Speakerphone to the Room Acoustics .....	49
Adjusting the Receiving Volume During a Call .....	49
Adjusting the Display to a Comfortable Reading Angle .....	49
Adjusting the display contrast .....	49
Selecting the Language of Screen Prompts .....	50
Locking the Telephone to Prevent Unauthorized Use .....	50
Saving Your PIN .....	51
<b>Saving Station Numbers, Functions, Procedures and Appointments</b> .....	<b>52</b>
Saving Repertory Dialing Numbers on a Key .....	52
Storing Station Speed-Dial Numbers .....	53
Assigning Functions to Keys .....	54
Assigning a Procedure (Operating Steps) to a Key .....	57
Saving Appointments .....	59
<b>Testing the Telephone</b> .....	<b>60</b>
Testing the Telephone Functions .....	60
Checking the Key Assignment .....	60
<b>Call Forwarding</b> .....	<b>61</b>
Using Variable Call Forwarding .....	61
Using Night Answer .....	62
Call Forwarding in the Carrier Network and Forwarding Multiple Subscriber Numbers (MSN) (Not for U.S.) ..	63

**Using Other Functions . . . . .64**

- Sending a Message . . . . . 64
  - Displaying and Deleting Messages You Have Sent . . . . . 64
  - Answering Messages . . . . . 64
- Leaving an Advisory Message . . . . . 65
  - Deleting Advisory Messages . . . . . 65
- Using Another Telephone Like Your Own . . . . . 66
- Fax Details and Message on Answering Machine . . . . . 67
- Resetting Services and Functions (System-Wide Cancellation for a Telephone) . . . . . 67
- Monitoring a Room . . . . . 68
- Activating Functions for Another Telephone . . . . . 69
- Locking Another Telephone to Prevent Unauthorized Use . . . . . 70
- Using System Functions from the Outside (DISA: Direct Inward System Access) . . . . . 70
- Using functions in ISDN via code dialing (keypad dialing) . . . . . 72
- Controlling Connected Computers or Other Programs and Telephone Data Service (HiPath 3500/3550/3700/3750 Only) . . . . . 73
- Controlling Relays . . . . . 74
- Sensors (HiPath 3300/3350/3500/3550 Only) . . . . . 74
- Radio Paging (Not for U.S.) . . . . . 75
  - Simple Paging Equipment . . . . . 75
  - Enhanced Paging Equipment (Hipath 3700/3750 Only) . . . . . 75

---

 **Team and Executive/Secretary Functions**

**Team and Executive/Secretary Functions With Trunk Keys . . . . .77**

- Using Trunk Keys . . . . . 77
  - Answering Calls With Trunk Keys . . . . . 78
  - Making Calls with Trunk Keys . . . . . 78
  - Using a Trunk Key to Place a Call on Hold and Retrieve It Again . . . 78
  - Switching Between Phone Calls on Multiple Trunks . . . . . 79
- Forwarding Calls on Lines . . . . . 79
- Using DSS Keys . . . . . 81
  - Using DSS Keys to Answer Calls . . . . . 81
  - Calling a Team Member Directly . . . . . 81
- Transferring a Call in Progress . . . . . 82
- Accepting a Call for Another Team Member . . . . . 82
- Joining or Leaving a Group Call (Not for the Executive Telephone in an Executive/Secretary Team) . . . 82
- Transferring Calls Directly to the Executive (Only in an Executive/Secretary Group) . . . . . 83

**Using Other Team Functions . . . . . 84**

Turning Group Call On and Off . . . . . 84  
 Accepting a Call for Another Member of Your Team . . . . . 86  
 Activating and Deactivating a Ringing Group. . . . . 86  
 Uniform Call Distribution (UCD). . . . . 87

 **System networking via LAN (PC network)**

**Special Functions in the LAN (PC Network). . . . . 89**

Leaving a Hunt Group/Group Call . . . . . 89  
 Transferring Call Forwarding . . . . . 90  
 Using Night Answer . . . . . 91  
 Activating and Deactivating a Ringing Group. . . . . 92  
 Controlling Relays . . . . . 93  
 Opening the Door . . . . . 94

 **All About Your Telephone**

**Labeling and Documentation . . . . . 95**

Labeling Key Fields . . . . . 95  
 Attaching a Station Number Label. . . . . 96  
 Documentation . . . . . 96


**Fixing Problems . . . . . 97**

Telephone Maintenance . . . . . 97  
 Troubleshooting. . . . . 97  
 Responding to Error Messages on the Screen . . . . . 98  
 Contacts for Resolving Problems . . . . . 98

**Index . . . . . 99**

# Basic operating instructions

## optiPoint 400 economy/standard control panel

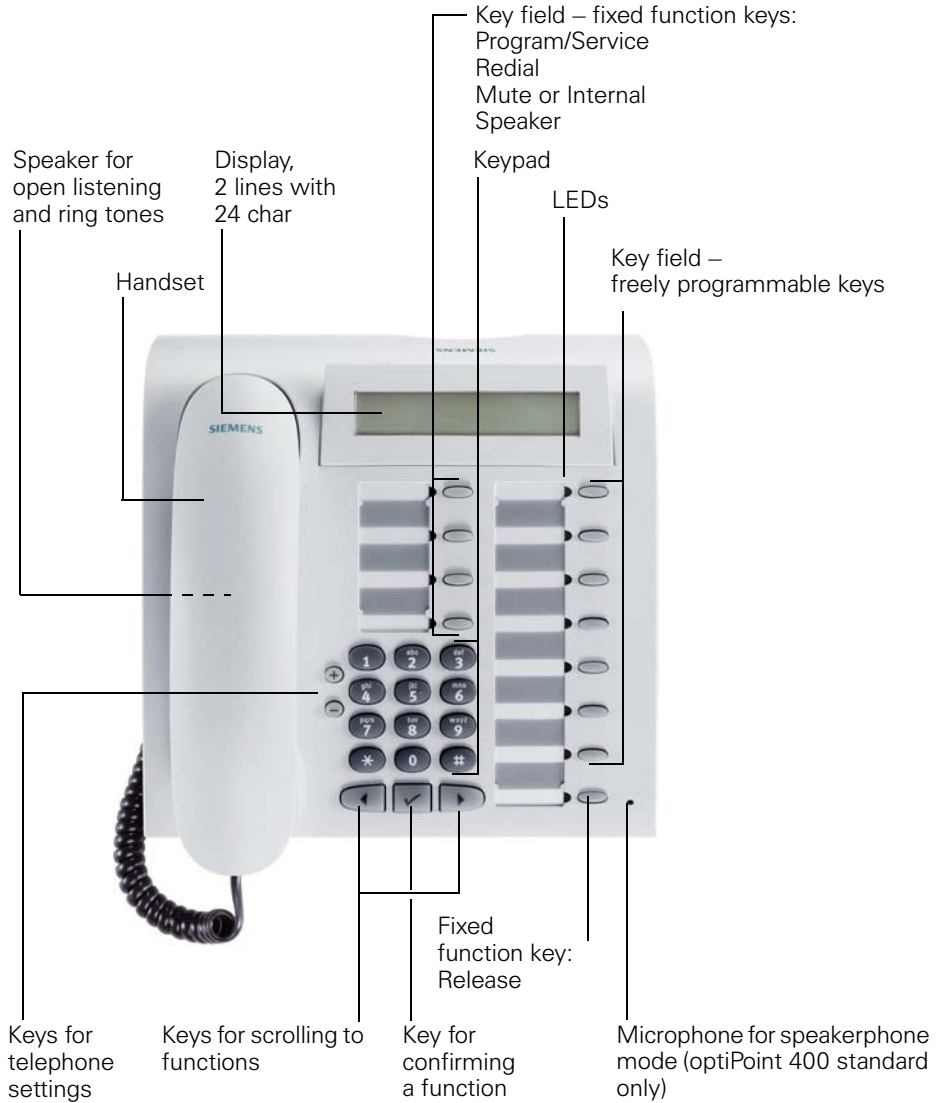

## Step by Step

## How to Use these Operating Instructions

You will find a graphic representation of the steps in logical sequence in the left column. Below is an explanation of the symbols:



Lift the handset (off-hook).



Replace the handset (on-hook).



Conduct a call.



 
Enter a telephone number or code.



Enter the code.



Press volume controls on the telephone.




Press the key.



Press the illuminated key.



 Press the flashing key.



The option appears on the screen.  
Press the  key to confirm your selection.



Search for an option.  
Press the  keys, until the option appears on the screen.  
Then press the  key to confirm your selection.

## Screen Displays



Line 1 displays prompts or acknowledgment messages, depending on the situation.

 
Line 2 displays functions that you can confirm by pressing . If the symbol ">" appears on the right, you can press   to access further options.




## Step by Step

### Accessing Functions

#### ... Interactively

You can select some functions **while the telephone is idle**, for example:



Use   to scroll to a function and press  to execute it.






You can select other functions **directly depending on the situation**. Example: you call a number, but the line is busy:

Press  to confirm.

or



Use   to scroll to a function and press  to execute it.




#### ... Via the Program/Service Menu

First press the "Program/Service" key. You then see a list of selection options, such as: "#0=Reset services" → page 67.



Press the key



Use   to scroll to a function and press  to execute it.

or



Enter the code directly.  
The Quick-Reference Operating Instructions contain a list of codes. However, they are also displayed on screen along with the corresponding function.

#### ... With Function Keys

If you saved a function on a key → page 54, you can access it directly as follows :



Press the Mute key to execute the function.

## Functions You Can Use

### Basic and Enhanced Functions

You can use all basic and enhanced communications platform functions that appear interactively on the screen, in the Program/Service menu, and when you press function keys.

### Additional Team and Executive/Secretary Functions

→ page 77f.

To help working and project groups work together more efficiently, the service personnel can configure a variety of team functions, depending on your preferences when working in the team. You can use these team functions in addition to the basic and enhanced functions.

In addition to call pickup, hunting groups (group call), and call distribution groups, you can also set up teams with multiple lines per telephone.

You can tell if a telephone has trunk keys if your station number and the numbers of your colleagues are programmed on trunk keys. You can access all lines and can also conduct different calls simultaneously on multiple lines.

Another team function category includes the executive/secretary functions, which are configured by the service personnel. You can use executive and secretary functions in addition to the basic and enhanced functions as well as other team functions.

An executive/secretary telephone has DSS keys for the executive or secretary, trunk keys for the executive and secretary, as well as ring transfer keys.

### Using the Telephone Efficiently

- You probably have certain colleagues or external parties with whom you talk on the phone especially frequently. To dial these numbers faster and more conveniently, you can save them on keys (Saving station numbers for repertory dialing on keys → page 52).
- All too often you reach a busy line when dialing a number. Amid the confusion of your working day, it's easy to forget to try the number again later on. To avoid this, make it a habit to use the "Callback" → page 45 function.

Step by Step

## Making and Answering Calls

Special default ring signaling is set for your telephone:

- When you receive an internal call, your telephone rings once every four seconds (single-tone sequence).
- When you receive an external call, your telephone rings twice in rapid succession every four seconds (dual-tone sequence).
- When you receive a call from the entrance telephone, your telephone rings three times in rapid succession every four seconds (triple-tone sequence).
- If a call is waiting, you hear a short tone (beep) every six seconds.

The number or the name of the caller appears on the display.

### Answering a Call With the Handset

The telephone rings. The caller appears on the screen.

 
Lift the handset.



Raise or lower the volume. Keep pressing the key until the desired volume is set.


#### Ending the call:

Replace the handset.



Press the key.

### Answering a Call with the Speaker (Speakerphone Mode)

 This function is not available with optiPoint 400 economy.

The telephone rings. The caller appears on the screen.



Press the key. The LED lights up. Speakerphone mode.



Raise or lower the volume. Keep pressing the key until the desired volume is set.

## Step by Step



or



### Ending the call:

Press the key. The LED goes out.

Press the key.

### Notes on speakerphone mode:

- Tell the other party that you are using speakerphone mode.
- The speakerphone works best at a low receiving volume.
- The ideal distance between the user and the telephone set in speakerphone mode is about 50 cm (approx. 20 inches).

## Open Listening in the Room During a Call

You can let other people in the room join in on the call. Let the other party know that you have turned on the speaker.

**Precondition:** You are conducting a call with the handset.

### Activating ring transfer:



 
Press the key. The LED lights up.

### Deactivating this function:




Press the key. The LED goes out.

Step by Step




## Switching to Speakerphone Mode

 This function is not available with optiPoint 400 economy.

**Precondition:** You are conducting a call with the handset.

Hold down the key and replace the handset. (in the U.S.: press the key once and replace the handset). Then release the key and continue the call.

## Switching to the Handset

 This function is not available with optiPoint 400 economy.

**Precondition:** You are engaged in a call in speakerphone mode.

Lift the handset. Continue the call.



## Using Call Waiting

Callers can still reach you while you are engaged in another call. A signal alerts you to the waiting call. You can either ignore or accept the waiting call. When you accept the waiting call, you can either end the first call or place it on hold and resume the call later on. You can also bar call waiting or the call waiting tone → page 15.

## Accepting a Waiting Call (Camp-On)

**Precondition:** You are engaged in a phone call and hear a tone (every six seconds).

### Ending the first call and answering the waiting call:

-  Replace the handset. Your telephone rings.
-  Answer the second call. Lift the handset.

### Placing the first call on hold and answering the second call:

Select and confirm.

## Step by Step

 
or



Press the key. The LED lights up. Enter the code.

You are connected to the call waiting party immediately. The first party is placed on hold.

### Ending the second call and resuming the first one:



Confirm.

or



Press the key. The LED lights up. Enter the code.

or



Replace the handset. "Recall: ..." appears on the screen. Lift the handset.

## Preventing and Allowing Call Waiting (Automatic Camp-On)

If this function has been configured (ask the service personnel), you can prevent or allow a second call → page 14 from being signaled by automatic camp-on during an ongoing call.



Press the key. The LED lights up

and

 


Select and confirm.

or




or



Enter the code for "off" or "on".


## Turning the Call Waiting Tone On and Off

 You can suppress the call waiting tone (every six seconds) for external calls. A one-time special dial tone then alerts you to the waiting call.




Select and confirm.

 or



or

 

Enter code for "tone off" or "tone on".

## Step by Step

### Accepting a Specific Call for Your Colleague

You hear another telephone ring.



Press the key. The LED lights up



Select and confirm.



Enter the code.

A called station appears on the screen.

If applicable



Select and confirm until you see the station you want.



Confirm.

or




If you know the number of the telephone that is ringing, enter it directly.

or



Press the flashing key.

---

 [Accepting calls in a team](#) → page 86.

---

### Rejecting Calls

You can reject calls which you do not wish to take. The call is then signaled at another definable telephone (ask the service personnel).

The telephone rings. The caller is displayed.



Press the key.

If a call cannot be rejected, your telephone will continue to ring. The message "currently not possible" (UK) or "Feature not available" (US) is displayed (e.g in the case of recalls).

## Step by Step

### Using Mailboxes

If you have programmed the "Mailbox" key → page 54, the associated LED lights up when messages have arrived for you. If your telephone is connected to a voice mail system, the "Mailbox" key will also light up to alert you to any messages that have arrived.

### Accessing the Mailbox



or

US: View messages? ✓

UK: Display Messages? ✓

▶ US: Message sent? ✓

▶ UK: Text? ✓

or

▶ US: Call voice mail? ✓

▶ UK: Call Voice Mail? ✓

Press the illuminated "Mailbox" key.

Confirm.

Select and confirm.

Follow the user prompts.

### Using Timed Reminders

**Precondition:** You must have saved a timed reminder → page 59. The current time is the time stored.

The telephone rings. The timed reminder appears on the screen.

US: Reminder:

UK: Reminder at:



or



Press the key twice.

Lift the handset and replace it again.




If you fail to answer the timed reminder, it repeats five times and is then erased.

Step by Step

## Using the Speakerphone

A colleague addresses you directly over the speaker with a speaker call. You hear a tone before the announcement. The other party's name or station number appears on the screen.


You can conduct the call with the handset or in speakerphone mode.

 This function is not available with optiPoint 400 economy

Lift the handset and answer the call.

Press the "OK" key to confirm your selection and answer the call.

Press the key and answer the call.

 If handsfree answerback is enabled (see below), you do not need to switch on the microphone - you can answer directly. You can answer immediately in speakerphone mode.

If handsfree answerback is disabled (default setting), follow the procedure described above.

Placing a speaker call to a colleague → page 26.

## Enabling and Disabling Handsfree Answerback

Select and confirm.

 
 
 

Enter the code for "on" or "off".

## Answering a Call With a Headset

Your telephone rings. Confirm.

### Ending the call:

Press the key. The LED goes out.

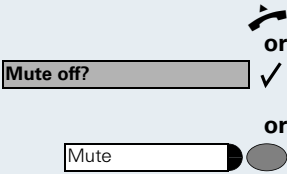

## Step by Step







### Turning Do Not Disturb On and Off

You can activate the do not disturb function if you do not want the receive any calls. When do not disturb is activated, internal callers hear a busy signal and external callers are rerouted to a telephone assigned for this purpose (ask the service personnel).

▶  ✓  
or

▶  ✓

or

   or   

Select and confirm.

Enter the code for "on" or "off".



When you lift the handset, a special dial tone (continuous buzzing tone) reminds you that do not disturb is active.

Authorized internal callers can automatically override the do not disturb function after five seconds.







### Turning Ringer Cutoff On and Off

You can activate the ringer cutoff function if you do not want the receive any calls. Calls are only identified by **one** ring signal, an indication on the display, and a key which has been programmed to flash (such as a trunk key).

▶  ✓  
or

▶  ✓

or

   or   

Select and confirm.

Enter the code for "on" or "off".

 
Step by Step

## Trace Call: Identifying Anonymous Callers (Not for U.S.)

You can have the carrier identify malicious external callers. You can save the caller's station number during the call or for 30 seconds after the call ends. However, it is essential that you do not replace your handset during this time.



and



or



Press the key. The LED lights up.

Select and confirm.

Enter the code.



After you have finished tracing the call, the data is stored on the carrier's system. Now contact the service personnel.

## Turning the Microphone On and Off

To prevent the other party from listening in while you consult with someone in your office, you can temporarily switch off the handset microphone or the handsfree microphone. You can also switch on the handsfree microphone to answer an announcement via the telephone speaker (speaker call, → page 18).



Speakerphone mode is not available with optiPoint 400 economy.

 
**Precondition:** You are conducting a call. The microphone is switched on.




or




or



or

 

or

 


Press the key. The LED lights up.

Press the illuminated key. The LED goes out.

Select and confirm.

 Press the key. The LED lights up



Enter the code for "on" or "off".

Step by Step

## Answering Calls from the Entrance Telephone and Opening the Door

If an entrance telephone has been programmed, you can use your telephone to speak to someone at the entrance telephone and to activate a door opener. If you have the proper authorization (ask the service personnel), you can activate the **door opener**, enabling visitors to open the door themselves by entering a 5-digit code (using a DTMF transmitter or installed keypad).

### Speaking to visitors via the entrance telephone:

**Precondition:** Your telephone rings.



Lift the handset within thirty seconds. You are connected to the entrance telephone immediately.

or



Lift the handset after more than thirty seconds.



Dial the entrance telephone number.

### Opening the door from your telephone during a call from the entrance telephone:

Open door? ✓

Confirm.

### Opening the door from your telephone without calling the entrance telephone:

Program/Service



Press the key. The LED lights up.

▶ \*61=Open door? ✓

Select and confirm.

or



Enter the code.



Dial the entrance telephone number.



Special features must be taken into consideration if your telephone operates with HiPath 5000 RSM (system networking via PC network) → page 94!

## Step by Step

### Opening the door with a code (at the door):



After ringing the bell, enter the five-digit code (using the keypad or a DTMF transmitter). Depending on how the door opener has been programmed, a doorbell call signal may or may not be forwarded.

### Activating the door opener:

Program/Service

Press the key. The LED lights up

▶ \*89=Door opener on? ✓  
or

Select and confirm.

Enter the code.



Dial the entrance telephone number.



Enter the five-digit code. Default code = "00000".

▶ 3=change password? ✓

Select the displayed function and press the "OK" dialog key to change the code.

▶ 1=enable with ring? ✓  
or

Select and confirm.

▶ 2=enable w/o ring? ✓

You can also open the door without a doorbell ring.

### Deactivating the door opener:

Program/Service

Press the key. The LED lights up.

▶ #89=Door opener off? ✓  
or

Select and confirm.

Enter the code.

## Accepting a Call From an Answering Machine

You can accept a call from any answering machine if the machine is connected to your system (contact the service personnel) and you have programmed the answering machine number on a key → page 54.

The LED lights up. Press the key.

**Step by Step**

## Display Number of Waiting Calls and Overload Indication

You can show the number of external waiting calls on the display by pressing the "View number of calls" key → page 54.



Press the "Waiting calls" key.

If the number of waiting calls exceeds a preset limit while you are engaged in another call (overload), the LED on the key lights up. Contact the service personnel to find out the waiting call limit.

- LED off:  
No callers waiting.
- LED flashes slowly:  
You have reached the programmed threshold.
- LED flashes rapidly:  
You have exceeded the threshold value (overload).

Step by Step

## Making Calls

### Off-Hook Dialing



Lift the handset.

Internal calls: Enter the station number.  
External calls: Enter the external code and the station number.

#### The called party does not answer or is busy:



Replace the handset.

### On-Hook Dialing



Internal calls: Enter the station number.  
External calls: Enter the external code and the station number.

#### The other party answers with speaker:



Lift the handset.

or

On-hook: Use speakerphone mode (not available with optiPoint 400 economy).

#### The called party does not answer or is busy:



Press the key. The LED goes out.



Your system may also be programmed so that you have to press the Internal key before you dial an internal number.

To call an external party, you have to enter an external code before dialing the party's telephone number (Prime Line is not active; contact the service personnel).

Step by Step

### En-Bloc Sending / Correcting Numbers

If this feature is configured (contact the service personnel), a connection is not attempted immediately when a station number is entered. This means that you can correct the number if necessary. The station number is only dialed at your specific request.



Internal: enter station number.  
External: enter external code and station number.

#### Dialing entered/displayed numbers:



Lift the handset.

or

Dial? ✓

Confirm.

#### Correcting numbers entered:

▶ Delete number? ✓

Select and confirm.  
The last digit entered in each case is deleted.



Enter the required digit(s).

#### Canceling en-bloc sending:

▶ End? ✓

Select and confirm.

or

Speaker

Press the key. The LED goes out.

or

Release

Press the key.

## Step by Step

▶ **Suppress call ID?** ✓

or

▶ **Restore caller ID?** ✓

or

**\* 8 6** or **† 8 6**

## Caller ID Suppression

You can prevent your station number or name from appearing on the displays of external parties you call. The feature remains active until you deactivate it.

Select and confirm.

Enter code for "suppress" or "restore".



The service personnel can turn caller ID suppression on and off for all telephones.

## Talking to Your Colleague With a Speaker Call

You can make a loudspeaker announcement through a loudspeaker if connected (ask the service personnel), or to an internal user with a system telephone without any action on their part.

Program/Service

Press the key. The LED lights up.

▶ **\* 80=Speaker call?** ✓

or

**\* 8 0**

Select and confirm.

Enter the code.



Enter the station number.



Responding to a speaker call → page 18.

Step by Step

## Activating Tone Dialing (DTMF Suffix Dialing)

You can transmit dual-tone multifrequency (**DTMF**) signals to control devices such as an answering machine or automatic information system.



Press the key. The LED lights up.

Select and confirm.

or



Enter the code.



You can use the keys "0" through "9", "\*", and "#" to transmit DTMF signals.



Ending the call also deactivates DTMF suffix dialing.

Your system may be configured so that you can start DTMF suffix-dialing immediately after setting up a connection.

## Automatic Connection Setup (Hotline)

If this function is configured (contact the service personnel), the system automatically sets up a connection to a preset internal or external destination.



Lift the handset.

Depending on the setting, the connection is either set up **immediately** or only **after** a preset **period of time** (hotline after a timeout).

Step by Step

Reserve trunk?



## Reserve Trunk

If this feature is configured (contact the service personnel), you can reserve a busy trunk for your own use. When the trunk is free, you receive a call and a message appears on the display.

**Precondition:** The message "US:Currently busy UK:busy at the moment" appears on your screen.

Confirm.

### When the reserved trunk becomes free:

Your telephone rings. The display shows "Trunk is free".



Lift the handset. You hear the CO dial tone.

Enter the number of the external station.

## Assigning a Station Number (Not for U.S.)

If this function has been configured (contact the service personnel), you can selectively assign a specific number (DID number) to your telephone before making an external call. The assigned number then appears on the called party's display.

Program/Service



Press the key. The LED lights up.

\*41=Temporary MSN?



Select and confirm.

or



Enter the code.



Enter the DID number you wish to use.




Dial the external number.

## Step by Step

## Trunk Flash

To activate ISDN-type services and features through the network carrier's analog trunks or those of other communications platforms (such as "consultation hold"), you must send a signal to the trunks before dialing the service code or telephone number.

**Precondition:** You have set up an external connection.

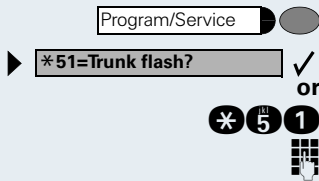

Press the key. The LED lights up.

Select and confirm.

Enter the code.

Enter the service code and/or telephone number.

Step by Step

### Associated Dialing/Dialing Aid

If this function has been configured (contact the service personnel), you can use a dialing aid to dial numbers and set up calls for your telephone.

The operating procedure depends on whether the dialing aid is connected to the **S<sub>0</sub> bus** or the **a/b (T/R) port**.

You can also use your system telephone as a dialing aid for other telephones.

#### Dialing aid on the S<sub>0</sub> bus:

On the PC, select a destination and start dialing.



The speaker on your telephone is switched on. Lift the handset when the other party answers.

#### Dialing aid at the a/b (T/R) port:

On the PC select a destination and start dialing.

"Lift the handset" appears on the PC screen.

 


Lift the handset.

#### Dialing aid from your telephone for another telephone:



Press the key. The LED lights up.



Select and confirm.



Enter the code.



Enter the internal station number ("Dial for:").


Enter the number you wish to dial.

Step by Step

## Calling Multiple Parties Simultaneously
 
### Calling a Second Party (Consultation Hold)


You can call a second party while engaged in a call. The first party is placed on hold.



Confirm.

Call the second party.

#### Return to the first party:

 


Confirm.



Press the key. The LED lights up. Enter the code. The LED goes out.


### Switching to the Party on Hold (Toggle)

 

Select and confirm.

Press the key. The LED lights up. Enter the code. The LED goes out.

### Combine the calling parties into a three-party conference

 

Select and confirm.

Press the key. The LED lights up. Enter the code. The LED goes out.

### Connecting the other parties to each other



Select and confirm.

## Step by Step

### Conducting a Conference

In a conference call, you can talk to as many as four other parties at the same time. These may be internal or external users.

Call the first party.

▶ **Start conference?** ✓

Select and confirm.

Call the second station. Announce the conference.

▶ **Conference?** ✓  
or

Select and confirm.

Program/Service   

Press the key. The LED lights up. Enter the code. The LED goes out.

A tone sounds every 30 seconds to indicate that a conference is in progress. Contact the service personnel for instructions on how to turn it off.

#### If the second party does not answer:

**Return to held call?** ✓

Confirm.

or

Enter the code.

### Adding Up to Five Parties to the Conference (Initiator Only)

**Add party?** ✓

Confirm.

Call the new party. Announce the conference.

▶ **Conference?** ✓  
or

Select and confirm.

Program/Service   

Press the key. The LED lights up. Enter the code. The LED goes out.

## Step by Step

▶ **View conf parties?** ✓

### Checking Which Parties Are in the Conference (Initiator Only)

Select and confirm.  
The first station appears on the screen.

**Next?** ✓

To display other stations, confirm each subsequent display.

▶ **Exit list?** ✓

To exit the list: Select and confirm.

### Removing Parties From the Conference (Initiator Only)

▶ **View conf parties?** ✓

Select and confirm.  
The first station appears on the screen.

**Next?** ✓

Confirm as often as required until the desired station appears.

▶ **Remove party?** ✓

Select and confirm.

### Leaving a Conference



Replace the handset.

or

▶ **US: Leave conference?** ✓

Select and confirm.

▶ **UK: Withdraw?** ✓

### Ending a Conference (Initiator Only)

▶ **End conference?** ✓

Select and confirm.

or

Program/Service

Press the key. The LED lights up. Enter the code. The LED goes out.

### Removing the ISDN Central Office Party From the Conference (Only for U.S.)

▶ **Drop last conf. party?** ✓

Select and confirm.

or

Program/Service

Press the key. The LED lights up. Enter the code. The LED goes out.

Step by Step

US: Consult? ✓

UK: Enquiry? ✓



## Transferring a Call

If the person you are speaking to wants to talk to another colleague of yours, you can transfer the call that colleague.

Confirm.

Enter the number of the party to which you want to transfer the call.

Announce the call, if necessary.



Replace the handset.

or

▶ Transfer? ✓

Select and confirm.

## ...After a Speaker Call (Announcement) in a Group

If this function has been configured (contact the service personnel), you can use a speaker call (announcement, → page 26) to announce a call in progress to a group of users → page 84.

After a member of the group has accepted the call request, you can transfer the waiting party.

**Precondition:** You are conducting a call.

US: Consult? ✓

UK: Enquiry? ✓

Program/Service

Confirm. The other party is placed on hold.

Press the key. The LED lights up.

▶ \*80=Speaker call? ✓

Select and confirm.

or



Enter the code.



 
Enter the group's station number.



Announce the call.

When a member of the group accepts the call → page 18, you are connected to this party.

## Step by Step



Replace the handset.

Select and confirm.



If the connection between the two other parties is not established within 45 seconds, the call from the first part returns to you (recall).


## Parking a Call

 You can park up to ten calls, either internal, external, or both. Parked calls can be displayed on and picked up from another telephone. This feature is useful if you want to continue a call at another phone.

**Precondition:** You are conducting a call.



Press the key. The LED lights up.



Select and confirm.

Enter the code.


Enter the number of the park slot (0 - 9) and make a note of it. If the park slot number you entered is not displayed, it is already in use; enter another one.

## Retrieving a Parked Call

 **Precondition:** One or more calls have been parked. The telephone is idle.



Press the key. The LED lights up.



Select and confirm.

Enter the code.

Enter the park slot number you noted earlier. If the park slot number you enter is not in use, you cannot retrieve the call.



If a parked call is not picked up, after a specific period of time the call is returned to the telephone from where it was parked (recall).

## Step by Step

### Placing External Calls on Hold

If you have programmed a key on your telephone as a hold key → page 54, you can place external calls on hold.

This enables all other parties to retrieve the call on the assigned line.



Held on line: 801

Press the "US:Hold UK:Common Hold" key.

A message appears showing which line is on hold (e.g. 801); make a note of the line number.

If a trunk key has been assigned, the LED flashes slowly.

#### If applicable



or

 


Replace the handset or press the key.

Depending on your system configuration, this may be necessary so other users can also pick up the held call.

### Picking up (Retrieving) a Held Call

**Precondition:** One or more calls have been parked. The telephone is idle.



Press the key. The LED lights up.



Select and confirm.

or



Enter the code.

or

 


If the "Line retrieved" key → page 54 has been configured, press the key.



Enter the line number you noted earlier.

or



If a "Trunk key" was assigned to this line → page 54: LED flashes slowly. Press the key.

Step by Step

## Making Calls to Stored Destinations

### Using a Caller List

If you are unable to accept an external or internal call, the call attempt is stored in the caller list. You can store answered calls either manually (both internal and external calls) or automatically (external calls only; contact the service personnel for details). Your telephone stores up to ten calls in chronological order. Each call is assigned a time stamp. The most recent entry not yet answered in the list is displayed first. Multiple calls from the same caller do not automatically generate new entries in the caller list. Instead, only the most recent time stamp for this caller is updated and its number incremented.

### Retrieving the Caller List

**Precondition:** The service personnel has set up a caller list for your telephone.

▶  ✓  
 or

Enter the code.

The last call is displayed on the screen.

✓

To view other calls, confirm each subsequent display.

### Ending Retrieval

▶  ✓  
 ▶  ✓  
 or

Select and confirm.

Press the key. The LED goes out.

Press the key. The LED goes out.

## Step by Step

- ▶ Time/Date sent? ✓  
or
- ▶ View station no. ✓  
or
- ▶ View name? ✓

- ▶ Call? ✓

- ▶ Delete? ✓

- Save number? ✓  
or



### Displaying the Call Time and Additional Call Information

**Precondition:** You have retrieved the caller list and the selected call is displayed.


Select and confirm.

### Dialing a Station Number from the Caller List

**Precondition:** You have retrieved the caller list and the selected call is displayed.

Select and confirm.

---

 The caller is automatically deleted from the caller list when a connection is finally set up.

---

### Removing an Entry from the Caller List

**Precondition:** You have retrieved the caller list and the selected call is displayed.

Confirm.

### Saving the Other Party's Station Number in the Caller List (Redial)

**Precondition:** You are engaged in a call or have called an external party.

Confirm.

Press the key. The LED lights up. Enter the code.

Step by Step

## Redialing a Number

The last three external telephone numbers dialed are stored automatically. You can redial them simply by pressing a key. The station number appears on your screen for two seconds and is then dialed.



Press the key once to dial the number last dialed.

Press the key twice to dial the next to the last number dialed.

Press the key three times to dial the third-to-the-last number dialed.

 
### Displaying and dialing saved station numbers



Press the key.



Press the "OK" dialog key within two seconds to confirm your choice.



The next stored number is displayed. Press the "OK" dialog key to confirm four selection.



Select and confirm.



If this feature is configured (contact the service personnel), account codes entered are also saved → page 44.

Step by Step

## Dialing a Number From the Internal Directory

The internal directory contains all station numbers and system speed-dial numbers assigned to a name. Contact the service personnel to find out if one was configured for your system.

**Precondition:** Names have been assigned to the station numbers stored in the system.



or



Lift the handset.

Press the key. The LED lights up.



 
Confirm.

The first entry is displayed on the screen.



To view further entries, confirm each subsequent display.

or



Select and confirm.

or



Enter the name you want to find, or just the first few letters, using the alphanumeric keypad.

You can use the keypad with the digits as an alphanumeric keypad in this case and enter the names by pressing the appropriate keys one or more times as needed.

For example, you can enter the letter "R" by pressing the "7" three times or the letter "E" by pressing the "3" twice. The first name with the entered letters is displayed. Enter the following letters by using the same method.

 
If no entry exists for the entered letters, you will hear a short beep.

To enter a space, press the "0".

Pressing "1" automatically displays the first entry in the internal directory.

The "\*" and "#" keys have no function here.

If applicable



Select and confirm each letter to be deleted. The last letter entered is deleted.

## Step by Step

### If applicable

▶  ✓

Select and confirm. All entered letters are deleted, and the first entry in the internal directory is displayed again.

▶  ✓

### The entry you wish to dial appears on the screen.


Select and confirm.



## Using Repertory Dialing Keys

**Precondition:** You have saved a station number on a repertory dialing key → page 52.

Press the key on which the number is saved. If the station number is located on the second level, first press "Shift".

 You can also press the repertory dial key during a call. This automatically sets up a consultation → page 31.

## Using Station and System Speed-Dial Numbers

**Precondition:** You have stored station speed-dial numbers → page 53 or the service personnel has stored system speed-dial numbers.



Press the key. The LED lights up

✓

Confirm.

or



Enter the code.



Enter a speed-dial number.

"\*0" to \*9" = station speed-dialing.

"000" to "999" = system speed-dialing (contact the service personnel).


Step by Step

## Displaying and Assigning Call Charges

### Displaying Call Charges (Not for U.S.)

#### For the current call:

The display usually shows call charges at the end of a call (default setting). If you wish to display charges continuously during a call in progress, the service personnel must request this feature from your carrier. Some carriers also let you display toll-free external calls. The message "Free of Charge" appears on the screen either before or during the call.


 If a call is transferred, the charges are assigned to the telephone to which the call was transferred.

#### For all calls and the last one conducted:

The connection charges for the last chargeable call conducted are displayed first. Five seconds later, the total accumulated connection charges appear.

Program/Service 

Press the key. The LED lights up.

 \*65=Show call charges? 

Select and confirm.

or

Enter the code.

**Step by Step**

## Displaying Call Charges for Another Telephone (Not for U.S.)

If this function is configured (contact the service personnel), you can display and print the chargeable calls for other telephones (such as a pay phone)

Precondition: You have programmed the function "View call charges" on a key → page 54.

The LED lights up to indicate that a you have conducted chargeable call since the last time you viewed the charges.



Press the "View call charges" key. The chargeable call appear on the screen.

**Next?** ✓

To display further chargeable calls, confirm each subsequent display.

▶ **Print?** ✓  
or

Select and confirm.

▶ **Delete?** ✓

or

▶ **Add'l information?** ✓

or

▶ **US: Exit?** ✓

▶ **UK: End?** ✓

Step by Step

## Dialing with Call Charge Assignment

You can assign external calls to certain projects.

**Precondition:** The service personnel has set up account codes for you.

Press the key. The LED lights up.

Select and confirm.

Enter the code.

Enter the account code.


Press this key.

Confirm.

May be necessary, depending on how your system is configured; contact the service personnel for details.

Enter the number of the external station.

---

 You can also enter the account code during an external call.

---

Program/Service 

▶ \*60=Account code? ✓  
or



and   
or

US: #=Save? ✓

UK: #=Save entry? ✓



## Step by Step

# If You Cannot Reach a Destination ...

## Using Callback

If a user is busy or is not answering, you can store an automatic callback. This feature saves you from having to make repeated attempts to reach the user.

You receive a callback,

- When the other party is no longer busy
- When the user who did not answer has conducted another call.

## Storing a Callback

**Precondition:** You have reached a busy line or no one answers.

Confirm.

US: Callback ✓

UK: Set Callback ✓

or



Enter the code.

## Answering a Callback

**Precondition:** A callback was saved. Your telephone rings. "Callback: ..." appears on the display.

Lift the handset.



or



Press the key. The LED lights up.

You hear a ring tone.

## Checking and Canceling a Saved Callback

Select and confirm.

▶ View callbacks? ✓

or



Enter the code.

▶ US: Next callback? ✓

▶ UK: Display next? ✓

Select the displayed function and press the "OK" dialog key to display additional entries.

## Step by Step

Delete? ✓

### Deleting a displayed entry:

Press the "OK" dialog key to confirm your selection

▶ US: Exit? ✓

### Ending callback display:

Select and confirm.

▶ UK: End? ✓

or

Program/Service ●

Press the key. The LED goes out.

or

Speaker ●

Press the key. The LED goes out.

Camp-on

## Call Waiting (Camp-On)

**Precondition:** You have dialed an internal number and hear a busy signal. It is important that you reach the called party.

Wait (approx. 5 seconds) until "Camp-on" appears on the display and the busy tone is followed by the ring tone.

The called party can then respond → page 14



The called party can prevent automatic call waiting → page 15.

If this feature is configured (contact the service personnel), you will hear the ring tone and the message "Camp-on" is immediately displayed.

---

## Step by Step

### Busy Override - Joining a Call in Progress

This function is only available if it has been configured by the service technician (contact the service personnel).

**Precondition:** You have dialed an internal number and hear a busy signal. It is important that you reach the called party.

▶  ✓  
or

\* 6 2

Select and confirm.

Enter the code.

The called party and person to whom this party is talking hear an alerting tone every two seconds.

If the called party has a system telephone with display, the following appears on the screen: "Override: (station no. or name)".

You can now start talking.

Step by Step

## Telephone Settings

### Adjusting the Ring Volume

**+** or **-**

**US: Ring volume?** ✓

**UK: Ringer volume?** ✓

**+** or **-**

Press these keys while the phone is idle.

Confirm.

To raise or lower the volume: Keep pressing the keys until the desired volume is set.

✓ Save.

### Adjusting the Ring Tone

**+** or **-**

▶ **US: Ring tone?** ✓

▶ **UK: Ringer tone?** ✓

**+** or **-**

Press these keys while the phone is idle.

Select and confirm.

To adjust the ring tone: Keep pressing the keys until the desired tone is set.

✓ Save.

### Adjusting the Attention Ring Volume

If you belong to a team that uses trunk keys, the telephone can alert you to other calls in the team even when you are engaged in another call → page 82. You hear the attention ring.

**+** or **-**

▶ **US: Attention Ring Vol?** ✓

▶ **UK: Volume?** ✓

**+** or **-**

Press one of these keys while the phone is idle.

Select and confirm.

To raise or lower the volume: Keep pressing the keys until the desired volume is set.

✓ Save.

## Step by Step

## Adjusting the Speakerphone to the Room Acoustics

To help the other party understand you clearly while you are talking into the microphone, you can adjust the telephone to the acoustics in your environment: "Quiet room", "Normal room" and "Noisy room".

**+ or -**

Press one of these keys while the phone is idle.

► **Speakerphone mode?** ✓

Select and confirm.

**+ or -**

To set the room type: Keep pressing these keys until the setting you want appears on the screen.

✓

Save.

## Adjusting the Receiving Volume During a Call

You are engaged in a call.

**+ or -**

To raise or lower the volume: Keep pressing the keys until the desired volume is set.

**+ or - simultaneously**

Save.

## Adjusting the Display to a Comfortable Reading Angle

You can swivel the display unit. Adjust the display unit so that you can clearly read the screen.

## Adjusting the display contrast

The display has four contrast levels that you can set according to your light conditions.

**+ or -**

Press one of the keys while the phone is idle.

► **Display?** ✓

Select and confirm.

► **Display contrast? >** ✓

Select and confirm.

**+ or -**

Change the display contrast. Press the key repeatedly until the desired level is obtained

✓

Save.

## Step by Step

Program/Service 

▶ **More features?** ✓

▶ **\*48= Select language?** ✓

or



▶ **15=Spanish?** ✓

## Selecting the Language of Screen Prompts

Press the key. The LED lights up.

Confirm.

Confirm.

Enter the code.

Select the language you wish to use (such as "Spanish") and press the "OK" dialog key to confirm.

## Locking the Telephone to Prevent Unauthorized Use

You can prevent unauthorized persons from using your telephone and its electronic notebook during your absence.

**Precondition:** You must have configured a personal identification number (PIN) for your telephone → page 51.

### To lock and unlock the telephone:

▶ **Changeover on?** ✓

or


▶ **Changeover off?** ✓

or



Enter the code for "on" or "off".

Enter the telephone lock PIN → page 51.

 While the telephone is locked, a special dial tone sounds when you lift the handset. You can continue to dial internal numbers as usual.

Your telephone can also be locked or unlocked again by an authorized party → page 70.


## Step by Step

## Saving Your PIN

To use the functions

- to prevent unauthorized persons from using your telephone → page 50
- to use another telephone like your own → page 66

you need to enter a personal identification number, which you can save yourself.

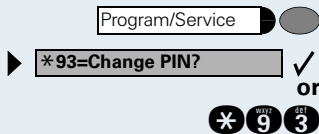

Press the key. The LED lights up.

Confirm.

Enter the PIN.



Enter the current five-digit PIN.

If you have not yet assigned a PIN, use the PIN "00000" the first time you enter it.



Enter the new PIN.



Repeat the new PIN.



If you forget your PIN, contact the service personnel, who can reset your PIN to "00000".

Step by Step

## Saving Station Numbers, Functions, Procedures and Appointments

You can save a frequently-dialed number, or frequently-used functions/procedures (comprising several operating steps) to any free key on your telephone or add-on device.

If you have programmed a Shift key, you can assign numbers and functions on two levels of the programmable keys. The second (Shift level) can accept only an external station number.

### Saving Repertory Dialing Numbers on a Key

Program/Service 

Press the key. The LED lights up.

▶ \*91=Prog. feature key? 

Select and confirm.

or

Enter the code.


If applicable

If the "Shift Key" has been configured → page 54, press the key.

Press the key. If the key is already in use, its assignment appears on the screen.

US: Change key? 

Confirm.

UK: Change feature? 

Redial key? 


Confirm.



Enter the station number.

US: Save? 

Confirm.

UK: Save entry? 

or

**If you make a mistake:**

▶ Previous? 

Select and confirm. This deletes all entered digits.

## Step by Step

US: Exit? ✓

Confirm.

UK: End? ✓

or

▶ US: Another key? ✓

Select and confirm.


▶ UK: Program another key? ✓



Simply press the key to dial a stored telephone number → page 41.

If you have saved an internal station number (=DSS call), the corresponding LED signals various states → page 55, → page 81.

You can do this while a call is in progress.

Program/Service 

Press the key. The LED lights up.

▶ \*92=Change Speed-dial? ✓

Confirm.

or



Enter the code.



Enter the speed-dial number you wish to use (\*0 to \*9). If the speed-dial number is already in use, the programmed station number appears on the screen.

US: Change? ✓

Confirm.

UK: Change entry? ✓



First enter the external code and then the external station number.

US: Save? ✓

Confirm.

UK: Save entry? ✓

or

**If you make a mistake:**

▶ Previous? ✓

Select and confirm. This deletes all entered digits.

## Storing Station Speed-Dial Numbers

You can store the ten numbers which you use the most and dial them using your own station speed-dial numbers: \*0 through \*9 → page 41.

## Step by Step

US: Next? ✓

Confirm.

UK: Next entry? ✓

or

▶ US: Change? ✓

Select and confirm.

▶ UK: Change entry? ✓

or

▶ Delete? ✓

Select and confirm.

or

▶ US: Exit ✓

Select and confirm.

▶ UK: End ✓

Program/Service 

Press the key. The LED lights up.

▶ \*91=Prog. feature key? ✓

Select and confirm.

or

Enter the code.



Press the key. If the key is already in use, its assignment appears on the screen.

US: Change key? ✓

Confirm.

UK: Change feature? ✓

▶  ✓

Select and confirm the function, such as "Do not disturb".

All programmable functions appear on the screen. See Quick-Reference Operating Instructions (Appendix): section ... about function keys.

### If applicable

▶ US: Save incomplete ✓

Select and confirm.

▶ UK: Store incomplete text ✓

Some functions (such as "Call forwarding") accept incomplete entries. This means you have to add more digits later on when you activate the function by pressing a key.

US: Exit? ✓

Confirm.


UK: End? ✓

or

▶ US: Another key? ✓

Select and confirm.

 
▶ UK: Program another key? ✓

 Now press the key to access the function directly. If the function can be turned on and off, such as "Do not disturb", pressing the key multiple times turns the function on and off.

Step by Step

**Meaning of LED Signals for Saved Functions:**

**Call forwarding, Forwarding - trunk, Forward Line, US:Night answer UK:Night Service, Do not disturb, Changeover, Advisory message, Ringer cutoff, HF answerback on/off, US:Join/leave group UK:Hunt group join/leave, Caller ID suppression, Call wait.term., Waiting tone off, Ring Transfer, Door opener on/off, Control Relay, Ringing group on, Shift Key, UCD (Available on/off, Work on/off, Night answer on/off):**



Saved function is not active.



Saved function is active.

**Callback:**



You have not set a callback.



You have set a callback.

**Mute (on/off):**



The microphone is switched on.



The microphone is switched off.

**Caller list:**



No calls saved.



Call request saved.

**Redial key (internal), Direct station select:**



The other party is not engaged in a call.



The other party is engaged in a call or has activated do not disturb.



Flashing rapidly - A caller is trying to reach you, please pick up the phone.  
Flashing slowly - A caller is trying to reach another party, who has not yet answered.

**Mailbox:**



No messages present.

 


Message(s) present.

**Call key, General call key, Trunk key, MULAP Key, Temporary MSN:**



No call on assigned trunk.



Active call on assigned trunk.



Flashing rapidly- A call has arrived on this line; press the key to pick up the call.  
Flashing slowly - A call on this line was placed on hold.

Step by Step



**Trunk group key**

At least one trunk is free.



All trunks in the trunk group are busy.



**View call charges:**

No chargeable calls have been made since the last time call charges were displayed.



Chargeable calls have been made since the last time call charges were displayed.



**Call forwarding, Forward Line:**

Flashing slowly - Either you or your trunk is the destination of a forwarded call.



**Fax details/answering machine**

No fax received or no message on answering machine.



Fax received or message on answering machine.



**View number of calls:**

No callers waiting



Flashing rapidly - Callers waiting (a certain number is exceeded).

Flashing slowly - Callers waiting (a certain number was reached).

**The following functions are assigned to keys which have no LED:**

Redial key (external), Procedure key, Trace call, Speed-dial, Release call, Clear, US:Lock all phones UK:Telephone Lock, Send message, US:Directory UK:Phonebook, Call waiting, US:Connect/Toggle UK:Shuttle, Conference, Speaker call, Retrieve line, Reserve trunk, Release trunk, Temporary Phone, Override, US:Park UK:Call Park, Pickup - directed, Pickup - group, Account code, Show call charges, Radio paging equip, Answer page, Timed reminder, Open door, DTMF dialing, Recall key, Room monitor, Hold key, Consultation, Associated dial, Associated serv., Tel. data service

Step by Step

## Assigning a Procedure (Operating Steps) to a Key

Station numbers and functions which require additional inputs, i.e. comprise several operating steps, can be saved to a single key on your telephone.

Using the associated dial function, for example → page 30, you can save all the remaining inputs required (station number of the calling party + the station number to be dialed) to a single key. Station numbers which require additional inputs but also dial pauses can also be stored.



Press the key. The LED lights up.

Select and confirm.

 
or



Enter the code.



Press the key. If a function has already been assigned to this key, a corresponding message is displayed.



Confirm.




Confirm.




Enter the procedure, e.g. **"\*67 231 089123456"**.  
 \*67= code for associated dial  
 231= station number of the calling party  
 089123456 = number to be dialed.

**If necessary**

 

 To insert pauses, press this key (a "P" is displayed).



Confirm.

or

**If you make a mistake:**



Select and confirm. This deletes all digits entered.

### Step by Step

US: End? ✓

Confirm.

UK: Exit? ✓

or

▶ US: Program another key? ✓

Select and confirm.

▶ UK: Another key? ✓



Select the stored procedure by pressing a key. Procedures containing functions which can be switched on/off can be activated by pressing the key, and deactivated by pressing the same key again.

You can also press a procedure key during a call. The stored digits are automatically sent as DTMF signals → page 27.

---

## Step by Step

### Saving Appointments

You can tell your telephone to give you a call when you want to be reminded of an appointment → page 17. To do this, you need to save the time you want the call to be made. You can enter a single appointment that will take place in the next twenty four hours, or you can enter a daily recurring appointment.

Program/Service

▶ \*46=Timed reminder on? ✓  
or

\*  4  6

Press the key. The LED lights up.

Confirm.

Enter the code.



Enter a 4-digit time, such as 0905 for 9:05 (= 9.05 a.m.) or 1430 for 14.30 (= 2.30 p.m.).

If necessary  2 or  7

If the selected language is "US English" (configure → page 50) you can enter the code 2 for "am" or 7 for "pm" (standard = "am").

One time only? ✓

▶ Daily? ✓

Confirm.

Select and confirm.

US: Save? ✓

UK: Save entry? ✓

Confirm.

#### Deleting and checking a saved appointment:

Program/Service

▶ #46=Timed reminder off? ✓  
or

4  6

Press the key. The LED lights up.

Confirm.

Enter the code.

Delete? ✓

▶ US: Exit ✓

▶ UK: End ✓

Confirm.

Select and confirm.

Step by Step

# Testing the Telephone

## Testing the Telephone Functions

You can test your telephone functions.

**Precondition:** Your telephone is idle.

Program/Service

▶ \*940=Phone test? ✓  
or

\* 9 4 0

Press the key. The LED lights up.

Select and confirm.

Enter the code.

If everything is OK,

- all LEDs on the telephone start flashing, including the ones on the key module (only the Program/Service menu LED lights up);
- your station number appears on the screen;
- all pixels in the display are activated;
- the ringer signal sounds.

## Checking the Key Assignment

You can check the assignment of keys on your telephone to see which functions are programmed on which keys.

Program/Service

▶ \*91=Prog. feature key? ✓  
or

\* 9 1

Press the key. The LED lights up.

Select and confirm.

Enter the code.

Press the key. The key assignment appears on the screen.

▶ US: Another key? ✓

▶ UK: Program another key? ✓

or

▶ US: Exit? ✓

▶ UK: End? ✓

Select and confirm.


Select and confirm.

## Step by Step

## Call Forwarding

### Using Variable Call Forwarding

You can immediately forward internal or external calls to different internal or external telephones (destinations). (External destinations require special configuration in the system.)

 Special features must be taken into consideration if your telephone operates with HiPath 5000 RSM (system networking via PC network) → page 90!

▶  ✓

or

\* 1

Enter the code.

✓

or

Select and confirm.

▶  ✓

or

▶  ✓

or

1 or 2 or 3

Enter the code.



Enter the number of the telephone that is ringing.

✓

Confirm.

✓

### Deactivating call forwarding:


▶  ✓

or

# 1

Select and confirm.

Enter the code.


 When call forwarding is active, a special dial tone sounds when you lift the handset.

If DID DTMF is active (contact the service personnel), you can also forward calls to this destination. Destinations: fax = 870, DID = 871, fax DID = 872.




Step by Step

### Using Night Answer

When night answer mode is active, for example during a lunch break or after office hours, all external calls are immediately forwarded to a specific internal telephone (night station). The night station can be defined by the service personnel (standard night answer service) or by you (temporary night answer service).


 Special features must be taken into consideration if your telephone operates with HiPath 5000 RSM (system networking via PC network) → page 91!

#### Activating this function:

▶  ✓  
or  
  

Select and confirm.

Enter the code.

✓  
or  


Press the "OK" dialog key to confirm ( standard night answer service)

Enter the code ( standard night answer service).






Enter the destination number (= temporary night answer service).

✓  
 ✓

Confirm.

#### Deactivating night answer:

▶  ✓  
or  
  

Select and confirm.

Enter the code.

Step by Step

## Call Forwarding in the Carrier Network and Forwarding Multiple Subscriber Numbers (MSN) (Not for U.S.)

If this function has been configured (contact the service personnel), you can forward calls to your assigned multiple subscriber number (MSN) (DID number) directly within the carrier network.

For example, you can forward your phone line to your home phone after business hours.

▶  ✓  
or

6 4

Select and confirm.

Enter the code.

✓  
or

▶  ✓

or

▶  ✓

or

1 or 2 or 3

Select and confirm the line type you wish to use.

Enter the code.



Enter your DID number.



Enter the destination number (without the external code).

✓

Confirm.

### Deactivating call forwarding:

▶  ✓  
or

6 4

Select and confirm.

Enter the code.

✓  
or

1 or 2 or 3

Confirm the displayed call forwarding type.

Enter the activated call forwarding type.



Enter your DID number.

Step by Step

## Using Other Functions

### Sending a Message

You can send short text messages to users who have system telephones.

Transmitted text messages are signaled in the same way as a callback request on system telephones e.g. optiPoint 500 entry.

▶ **US: Send message?** ✓

Select and confirm.

▶ **UK: Send Message?** ✓

or

\* 6 8

Enter the code.



Enter the recipient's internal station number.

▶ **0=Please call back** ✓

Select and confirm the preprogrammed message (which can be changed by the service personnel).

or

0 ... 9

Enter the code directly.

The codes appear on the screen, next to the messages to which they are assigned.

**Send?** ✓

Confirm.

### Displaying and Deleting Messages You Have Sent

▶ **View sent message?** ✓

Select and confirm.

or

# 6 8

Enter the code.

▶  ✓

Follow the display prompts.

### Answering Messages

"Messages received:" appears on your screen, along with an indication of the length.

**US: View messages?** ✓

Confirm.

**UK: Display Messages?** ✓

▶  ✓

Follow the display prompts.

## Step by Step

## Leaving an Advisory Message

You can leave an advisory message on your telephone screen for internal callers who want to reach you while you are away from your desk.

When another party calls you, the message appears on the caller's screen.

▶  ✓

or

\* 6 9

Select and confirm.

Enter the code.

▶  ✓

or

0 ... 9

Select and confirm the preprogrammed message (which can be changed by the service personnel).

Enter the code directly.

The codes appear on the screen, next to the messages to which they are assigned.



You can add numeric input to preprogrammed messages that end in a colon.

▶  ✓

or

# 6 9

or



Select and confirm.

Enter the code.

If you have programmed an "Advisory message" key → page 54: The LED lights up. Press the key.

## Deleting Advisory Messages


## Step by Step

### Using Another Telephone Like Your Own

Other people can temporarily use your telephone for outgoing calls as though it were their own.

Program/Service 

Press the key. The LED lights up.

▶ \*508=Temporary Phone?  or

Select and confirm.

Enter the code.



Enter the other user's station number.



Enter the other user's telephone lock PIN. → page 51.

**If applicable**

**Change password**

Users who have not yet selected a personal identification number are prompted to do so on their own telephones.



Dial the external number.

 
This state is canceled at the end of the call.

## Step by Step

## Fax Details and Message on Answering Machine

If a fax or answering machine is connected to your system and you have assigned the "Fax details" function to a programmable key → page 54, the key lights up when a fax or a message has been received.

### Deactivating indication:




Press the illuminated "Fax details" key. The LED goes out.


## Resetting Services and Functions (System-Wide Cancellation for a Telephone)

 There is a general reset procedure for activated functions. The following functions are canceled, if they were activated:

- Forwarding on
- Advisory msg. on
- Ringing group on
- Hunting group off
- Suppress call ID
- Waiting tone off
- DND on
- Ringer cutoff on
- Messages received:
- View callbacks



Press the key. The LED lights up.

 

Select and confirm.



Enter the code.

## Step by Step

### Monitoring a Room


A telephone can be used to monitor a room. The function must be activated on the telephone that you want to monitor.

Calling this telephone lets you hear what is going on in the room.

#### Activating the telephone to be monitored:

Program/Service 

Press the key. The LED lights up.

▶ \*88=Room monitor? 

Select and confirm.


or

Enter the code.

You can either leave the telephone in speakerphone mode or lift the handset and leave it directed towards the noise source.

#### Deactivating the telephone to be monitored:

Program/Service 

Press the illuminated key. The LED goes out.

or



Replace the handset.

#### Monitoring the room:




Enter the internal number if the telephone in the room you wish to monitor.

## Step by Step

## Activating Functions for Another Telephone

If this function has been configured (contact the service personnel), you can turn the following functions on and off for other telephones. This feature is also known as associated service.

- Do not disturb,  
code: \*97/#97 → page 19
- Call forwarding,  
code: \* 11, \* 12, \* 13/#1 → page 61
- Locking and unlocking telephone,  
code: \*66/#66 → page 50
- Group ringing,  
code: \*81/#81 → page 84
- Leaving an advisory message,  
code: \*69/#69 → page 65
- Group call,  
code: \*85/#85 → page 84
- Reset services and functions,  
code: #0 → page 67
- Control relay,  
code: \*90/#90 → page 74
- Night service, code: \*44/#44 → page 62
- Timed reminders,  
code \*65 → page 59





or



Press the key. The LED lights up.

Confirm.

Enter the code.

Enter the internal number of the telephone for which you want to activate the function.

Enter the code, such as \*97 for do not disturb.

Follow the prompts on the screen for any further input.

Step by Step

## Locking Another Telephone to Prevent Unauthorized Use

If this function has been configured (contact the service personnel), you can lock other telephones to prevent unauthorized use and then unlock them again later.

You can use this function to unlock the telephone for users who have locked their telephones and then forgotten their PINs.

Program/Service 

Press the key. The LED lights up.

▶ **US: \*943=Lock all phones?** ✓

Confirm.

▶ **UK: \*943=Telephone Lock?** ✓

or

Enter the code.



Enter the internal number of the telephones that you want to lock or unlock.



**\*=Lock phone?** ✓

Confirm.

or

**#=Unlock phone?** ✓

or

 or 

Enter the code.

## Using System Functions from the Outside (DISA: Direct Inward System Access)

If this function has been configured (contact the service personnel), you can set up external outgoing calls from outside the system, just like an internal user. You can also activate and deactivate the following functions in your system:

- Reset services and functions, code: #0 → page 67
- Call forwarding, code: \*1/#1 → page 61
- Lock and unlock all phones, code: \*66/#66 → page 50
- Save PIN, code: \*93 → page 51
- Send a message, code: \*68/#68 → page 64

## Step by Step

- Leave an advisory message, code: \*69/#69 → page 65
- Group ringing, code: \*81/#81 → page 84
- Group call, code: \*85/#85 → page 84
- Suppress caller ID, code: \*86/#86 → page 26
- Waiting tone, code: \*87/#87 → page 15
- Open door, code: \*61 → page 21
- Door opener on/off, code: \*89/#89 → page 22
- Control relay, code: \*90/#90 → page 74
- Do not disturb, code: \*97/#97 → page 19
- Ringer cutoff function, code: \*98/#98 → page 19
- Speed-dialing, code: \*7 → page 41
- Associated service, code: \*83 → page 69

**Precondition:** You have a telephone that uses tone dialing (DTMF dialing) or you can switch your telephone to tone dialing. The telephone is not connected to the system.



Set up a call to the system. Enter the station number (contact the service personnel).



Wait for a continuous tone (if necessary switch the telephone to tone dialing), then enter the internal number that has been assigned to you and the associated PIN.



Enter the code (necessary only if programmed in the system).



Wait for a dial tone and then enter the code, such as \*97 for Do not disturb on. Make other inputs as necessary; (refer to the operating instructions for pulse and DTMF telephones).

or



Dial the external number.



You can only execute one function at a time, or set up only one outgoing connection.

The connection is immediately released after successful activation of a function.

In the case of an external-external call, the connection is released as soon as either of the parties ends the call.

Step by Step

## Using functions in ISDN via code dialing (keypad dialing)

If authorized (contact the service personnel), you can set ISDN functions via code dialing in some countries.

Program/Service

▶ \*503=Keypad dialing? ✓

or

\* 5 0 3

Press the key. The LED lights up.

Confirm.

Enter the code.



Enter the number of the trunk you wish to use (contact the service personnel).



Entering a code for required ISDN function (contact the service personnel).



Contact your network provider to find out which ISDN functions can be code-controlled in your country.


Siemens AG shall not be liable for damages/ costs which may be incurred by fraudulent activities or remote operation (e.g. toll fraud).

## Step by Step

## Controlling Connected Computers or Other Programs and Telephone Data Service (HiPath 3500/3550/3700/3750 Only)

If this function has been configured (contact the service personnel), you can control connected computers or programs running on them, such as hotel services or information systems, from your telephone.

**Precondition:** You have set up a connection.

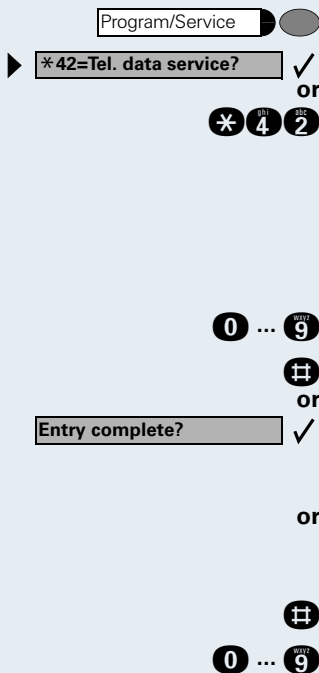

Press the key. The LED lights up.

Confirm.

Enter the code.

The connected computer now prompts you to enter the data, which you can do in one of two ways. Contact the service personnel to find out which option is programmed in your system:

- Input in en-bloc mode.

Enter data.

Press this key at the end of the entry.

Confirm.

- Input in online mode:

The connected computer processes your entries directly.

Enter the code.

Enter data.

Step by Step

## Controlling Relays

If this function has been configured (contact the service personnel), you can turn up to four relays on and off to control different facilities (such as a door opener). Depending on how they are programmed, you can switch the relays on and off or switch them on and have them switched off automatically after a timeout.



Special features must be taken into consideration if your telephone operates with HiPath 5000 RSM (system networking via PC network) → page 93!

▶  ✓  
or  
▶  ✓

or  
\* 9 0 or # 9 0

1 ... 4

Select and confirm.

Enter the code for "on" or "off".

Enter the relay.

## Sensors (HiPath 3300/3350/3500/3550 Only)

If this function has been configured (contact the service personnel), sensors detect signals, causing your phone to ring and a message to appear on your screen.

## Step by Step

## Radio Paging (Not for U.S.)

If paging equipment is connected to your system (contact the service personnel), you can contact people via their pocket receivers.

The pocket receiver indicates to the person you are looking for that someone is trying to get in touch. The person you page can then go to the nearest telephone and call you.

The operating procedures differ according to the type of radio paging equipment connected (simple or enhanced paging equipment).

### Simple Paging Equipment

#### Paging:

To be paged, you must have activated a call ringing group → page 86, call forwarding → page 61, or call re-direction (contact the service personnel) to the internal station number of your paging equipment. A call request is then signaled automatically.

#### Answering the page from the nearest telephone:

Lift the handset.

Enter the code.

Enter your own station number.



### Enhanced Paging Equipment (Hipath 3700/3750 Only)


#### Paging:

Press the key. The LED lights up.

Select and confirm.

Enter the code.

Enter the number of the party you want to page.

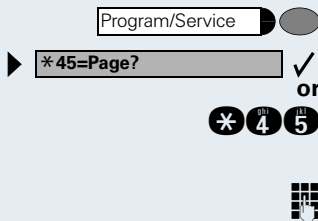

## Step by Step

▶ **1=Display information?** ✓

Select and confirm.

or

▶ **2=Text?** ✓

### Answering the page from the nearest telephone:



Lift the handset.

Program/Service 

Press the key. The LED lights up.

▶ **#45=Answer page?** ✓

Select and confirm.

or



Enter the code.



Enter your own station number.

Step by Step

## Team and Executive/Secretary Functions With Trunk Keys

If this function has been configured (contact the service personnel), you belong to a team of users for whom special keys were programmed:

- Trunk keys (MULAP keys)
- Direct station selection keys
- Group call key  
(not on the executive telephone in an executive/secretary team)
- Ring transfer keys  
(only in an executive/secretary team)

As a team member, you can also program these keys yourself ("MULAP key", "Direct station select", "US:Join/leave group UK:Hunt group join/leave", "Ring Transfer: on/off") → page 54. You can also program a call forwarding key ("Forward Line") for each line.

### Using Trunk Keys

A separate trunk is assigned to each team member. All other team members have the same trunk keys for these trunks on their telephones. This means that every team member can use all programmed trunk keys. Each team member can also be reached under a separate station number, if one was assigned.

#### Meaning of LED Indications on Trunk Keys:



 
Trunk key LED is off - Trunk is free and can be used.

or



Trunk key LED is lit - Trunk is in use.

or



Trunk key LED is flashing **rapidly** - A call on the trunk needs to be answered.

or



Trunk key LED is flashing **slowly** - A call on hold is waiting.

## Step by Step

### Answering Calls With Trunk Keys

**Precondition:** Your telephone is ringing and/or the trunk key is flashing rapidly.



Press the rapidly flashing trunk key.

This is not necessary if the trunk is automatically assigned to you when you lift the handset or press the "Speaker" key; in this case the assigned trunk key lights up.



Lift the handset.

With on-hook dialing: Use speakerphone mode and open listening.

### Making Calls with Trunk Keys



Press the free trunk key that you want to use to set up your call.

This is not necessary if the trunk is automatically assigned to you when you lift the handset or press the "Speaker" key; in this case the assigned trunk key lights up.



Dial the station number.



When the other party answers: Lift the handset.

With on-hook dialing: Use speakerphone mode and open listening.

### Using a Trunk Key to Place a Call on Hold and Retrieve It Again

**Precondition:** You are conducting a call over a trunk in your group. The "US:Hold UK:Common Hold" key has been programmed on your telephone → page 54.

#### Placing a call on hold:



Press the "US:Hold UK:Common Hold" key.



Replace the handset or press the key.

Depending on the configuration (contact the service personnel), this may be necessary so other team members can also pick up the call on hold.

## Step by Step

 


### Retrieving the call:

Press the slowly flashing trunk key.

## Switching Between Phone Calls on Multiple Trunks

**Precondition:** You are conducting a call over a trunk in your group. Another trunk key starts flashing.



Press the flashing trunk key. The first party is placed on hold on the other trunk.



Press the slowly flashing trunk key. The second party is placed on hold.

You can switch between the two call as many times as you wish. Always press the slowly flashing trunk key.


## Forwarding Calls on Lines

 You can immediately forward internal or external calls on your lines to different internal or external telephones (destinations); even external destinations are possible in certain system configurations.

Activating call forwarding for one trunk activates the function for all trunk keys assigned to this trunk in your group.



Press the key. The LED lights up.



Select and confirm.



Enter the code.



Press the trunk key you wish to use.



Enter the number of the trunk you wish to use.



If available. Press the "Forward Line" key. (You have stored the incomplete "Forward Line" function on the key, excluding the call forwarding type and destination → page 54.)

## Step by Step

1=all calls? ✓



Select and confirm.

or

▶ 2=external calls only? ✓



or

▶ 3=internal calls only? ✓



or

1 or 2 or 3



Enter the code.



Enter the destination number.

US: Save? ✓



Confirm.

UK: Save entry? ✓



or



If available. Press the "Forward Line" key. (You have stored the call forwarding type and destination on the "Forward Line" key → page 54.)

### Deactivating call forwarding:

Program/Service



Press the key. The LED lights up.

▶ #501=Forward Line: Off? ✓



or

Select and confirm.

# 5 0 1



Enter the code.



Press the trunk key you wish to use.

or



Enter the number of the trunk key you wish to use.

or



If available. Press the "Forward Line" key.



If you have activated call forwarding for a trunk, a special dial tone sounds when the line is seized.

### Meaning of LED Indications on the "Forward Line" Keys:



The LED on the "Forward Line" key is off - call forwarding is not active for this trunk.

or



LED on the "Forward Line" key is lit - call forwarding is active for this trunk.

or



LED on the "Forward Line" key is flashing **slowly** - the trunk is a call forwarding destination.

Step by Step

## Using DSS Keys

Each team member has a DSS key for every other member in the team. This enables every team member to reach all other members of the team directly, simply by pressing a key.

### Meaning of LED Indications on DSS Keys



LED on the DSS key is off - the team member is not engaged in a phone call.

or



LED on the DSS key is lit - the team member is engaged in a phone call or has activated do not disturb.

or



LED on the DSS key is flashing **rapidly** - a call has arrived for you and needs to be answered.

or



LED on the DSS keys is flashing **slowly** - a caller is trying to reach another member of your team, who has not yet answered.

## Using DSS Keys to Answer Calls

**Precondition:** Your telephone is ringing and/or a DSS key is flashing.

If appl.



Press the flashing DSS key. This is not necessary if you are receiving a DSS call and the DSS key is flashing rapidly.



or

Lift the handset.

With on-hook dialing: Use speakerphone mode and open listening.

## Calling a Team Member Directly



or



Press the direct station selection key.

If the team member you wish to reach is engaged in another call, the DSS key on your telephone is illuminated. You can make the call even in this case.

 


or

When the other party answers: Lift the handset.

With on-hook dialing: Use speakerphone mode and open listening.

## Step by Step



### Transferring a Call in Progress

Press the DSS key and announce the call, if desired.

Replace the handset or press the key.

### Accepting a Call for Another Team Member



Press the flashing DSS key or trunk key.

Lift the handset.

With on-hook dialing: Use speakerphone mode and open listening.

### Joining or Leaving a Group Call (Not for the Executive Telephone in an Executive/Secretary Team)

By default, your telephone rings when a call arrives on your line.

If you want your phone to ring even when calls arrive on other lines, you can turn your ringer on and off for each line in your group → page 84.

Your telephone rings (one time only or every four seconds) even when you are engaged in another call (attention ring volume → page 48).

 
Step by Step

## Transferring Calls Directly to the Executive (Only in an Executive/Secretary Group)

Normally, audible signaling of all calls for the executive is heard only in the secretary's office.

You can activate audible signaling so that calls are only signaled on the executive telephone and on a second telephone assigned to it.

### Activating ring transfer:



Press the Ring Transfer" key. The LED lights up.

or



Press the key. The LED lights up.



Select and confirm.

or



Enter the code.




Press the trunk key you wish to use.



Enter the number of the trunk you wish to use.

### Deactivating ring transfer:

 

Press the "Ring Transfer" key. The LED goes out.

or



Press the key. The LED lights up.



Select and confirm.

or



Enter the code.



Press the trunk key you wish to use.



Enter the number of the trunk you wish to use.

Step by Step

## Using Other Team Functions

### Turning Group Call On and Off

If this function has been configured (contact the service personnel), you belong to one or more groups of users who can each be reached under a hunt group or group call number.


Incoming calls are signaled on all group member telephones in the order in which they are received ( hunt group) or simultaneously (= group call) until one member of the group accepts the call.

You can belong to a team (including executive/secretary ones) in which station numbers are programmed on trunk keys → page 77.

Each member of the group remains available under his or her own station number.

You can activate and deactivate the audible signal for a hunt group, group call or individual trunks in a group (including an executive/secretary team).

If the LED on a programmed "US:Join/leave group UK:Hunt group join/leave" key → page 54 is illuminated, this means that the audible tone was activated for at least one group.


 Special features must be taken into consideration if your telephone operates with HiPath 5000 RSM (system networking via PC network) → page 89!

#### You belong to a hunt group or a group call:

Select and confirm.


- US: Leave group? ✓
- UK: Leave hunt group? ✓
- or**
- US: Join group? ✓
- UK: Join hunt group? ✓

**or**

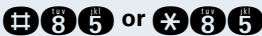

Enter the code for "leave" or "join".

**or**

 




 
Press the Hunt group join/leave key.

## Step by Step

▶ **US: Leave group?** ✓  
 ▶ **UK: Leave hunt group?** ✓  
 or

▶ **US: Join group?** ✓  
 ▶ **UK: Join hunt group?** ✓

or

  or  

or



or



**301 x group name**  
 or

**301 group name**

**You belong to multiple groups or to one group with trunk keys (including executive/secretary teams).**

Select and confirm.

Enter the code for "leave" or "join".

Press the "Hunt group join/leave" key.

If an "x" appears between group/trunk number (such as 301) and group name, the audible tone is active for this group or trunk.

No "x" means that the audible tone was deactivated.

**Next?** ✓

Press the "OK" dialog key to confirm your selection and display the next group or trunk number and group name.

or

▶ **US: Leave group?** ✓  
 ▶ **UK: Leave hunt group?** ✓

Select and confirm. This turns off the audible tone for the displayed group or trunk.

or

▶ **US: Join group?** ✓  
 ▶ **UK: Join hunt group?** ✓

Select and confirm.

This turns off the audible tone for the displayed group or trunk.

or

▶ **#=Leave all groups?** ✓

Select and confirm.

This turns off the audible tone for all groups and trunks.

or



or

▶ **\*=Rejoin\_all\_groups** ✓

Select and confirm.

This turns off the audible tone for all groups and trunks.

or



Enter the code for "Join all groups".

## Step by Step



If you deactivate the audible tone for another group or trunk, or deactivate it for all groups and trunks to which you belong, a special dial tone sounds when you lift the handset.

## Accepting a Call for Another Member of Your Team

You can accept calls for other telephones in your team from your telephone even while engaged in another call. To do this, contact the service personnel to find out if a pickup group has been configured.

**Precondition:** Your telephone rings briefly. The following message appears on the display: "Call for:".

Pickup - group? ✓

or

Program/Service

\* 5 7

Confirm.

Press the key. The LED lights up.

Enter the code.

## Activating and Deactivating a Ringing Group

You can have calls for your telephone signaled audibly at up to five other internal phones. The person who answers first receives the call.



Special features must be taken into consideration if your telephone operates with HiPath 5000 RSM (system networking via PC network) → page 92!

Saving, displaying, and deleting telephones for the ringing group:

Program/Service

Press the key. The LED lights up.

▶ \*81=Ring group on? ✓

or



\* 8 1

Enter the code.

▶

Follow the display prompts (enter the internal station number).

## Step by Step

▶  ✓  
or  
 

### Removing all telephones in call ringing group:

Select and confirm.

Enter the code.

## Uniform Call Distribution (UCD)

If this function has been configured (contact the service personnel), you belong to a group of users (agents) to whom calls are distributed.

An incoming call is always assigned to the agent who has had the longest break without a call.

### Logging on and off at the beginning and end of your shift:



Press the key. The LED lights up.

▶  ✓

Select and confirm.

✓









Confirm.

or

✓

or

Enter the code for "Log on" or "Log off".

    or    



To log on, enter your identification number ("Agent:").  
Contact the service personnel to find out what it is.

### Logging on and off during your shift:



Press the key. The LED lights up.

▶  ✓

Select and confirm.

▶  ✓









Confirm.

or

✓

or

Enter the code for "Not available" or "Available".

    or    

## Step by Step

Program/Service

▶ UCD? ✓

▶ \* 403=Work on? ✓

#403=Work off? ✓

or

or

\* 4 0 3 or # 4 0 3

### Requesting and activating a work time:

If you want to follow-up on the last call you answered without being disturbed, you can request and activate a work time. This removes your telephone from the call distribution cycle for a programmable period of time until you log back on.

Press the key. The LED lights up.

Select and confirm.

Confirm.

Enter the code for "on" or "off".

Program/Service

▶ UCD? ✓

▶ \* 404=UCD night on? ✓

#404=UCD night off? ✓

or

or

\* 4 0 4 or # 4 0 4

### Turning the night service on and off for UCD:

Press the key. The LED lights up.

Select and confirm.

Confirm.

Enter the code for "on" or "off".

Program/Service

▶ UCD? ✓

▶ \* 405=Calls in queue? ✓

or

\* 4 0 5

### Display the number of waiting calls:

Press the key. The LED lights up.

Select and confirm.

Confirm.

Enter the code for "on" or "off".

## Step by Step

## Special Functions in the LAN (PC Network)

If your telephone is operating in a HiPath 5000 RSM environment, multiple HiPath 3000 systems are interconnected via a LAN (**L**ocal **A**rea **N**etwork, e.g. proprietary PC network). Your telephone calls are conducted via the LAN (PC network).

If this is the case, you must take certain special features into consideration when performing various functions. These are described below.

### Leaving a Hunt Group/Group Call

**Precondition:** you belong to a hunt group/group call  
→ page 84 of another HiPath 3000:

▶  ✓  
or

\* 4 7

Select and confirm.

Enter the code.



Enter the (DISA) call number of the other HiPath 3000.

✓ or

Confirm the entry.



Enter the (DISA) call number of your telephone.

✓ or

Confirm the entry.

▶  ✓  
or

▶  ✓  
or

8 5 or \* 8 5

Select and confirm.

Enter the code for "leave" or "join".

**You belong to multiple groups of another HiPath 3000:**



Enter the group number for "Join/Leave, directed".

Step by Step

### Transferring Call Forwarding

You can activate/deactivate call forwarding → page 61 for your telephone from other HiPath 5000 RSM telephones.

▶ Internal DISA? ✓  
or  
\* 4 7

Select and confirm.

Enter the code.

Enter the (DISA) call number of the HiPath 3000 to which your telephone is connected.  
✓ or

Enter the (DISA) call number of the HiPath 3000 to which your telephone is connected.

Confirm the entry.

Enter the (DISA) call number of your telephone.  
✓ or

Enter the (DISA) call number of your telephone.

Confirm the entry.

#### Activating this function:

▶ Call forwarding on? ✓  
or  
\* 1

Select and confirm.

Enter the code.

1=all calls? ✓  
or

Select and confirm.

▶ 2=external calls only? ✓

or

▶ 3=internal calls only? ✓  
or

1 or 2 or 3

Enter the code.



Enter the destination number.

Save? ✓

Confirm.

#### Deactivating this function:

▶ Call forwarding off? ✓  
or  
# 1

Select and confirm.

Enter the code.

## Step by Step

## Using Night Answer

If authorized (contact the service personnel), you can define telephones in other HiPath 3000 communications platforms as the night answer → page 62.

▶  ✓

or



Select and confirm.

Enter the code.



Enter the (DISA) call number of the HiPath 3000 to which the night answer telephone is connected.

✓ or

Confirm the entry.



Enter the (DISA) call number of the telephone from which you wish to activate/deactivate the night answer service.

✓ or

Confirm the entry.

### Activating this function:

▶  ✓

or



Select and confirm.

Enter the code.



Enter the destination number (= temporary night answer service).

✓

Confirm.

### Deactivating this function:

▶  ✓

or



Select and confirm.

Enter the code.

## Step by Step

### Activating and Deactivating a Ringing Group

You can have calls for your telephone signaled audibly at external telephones or at telephones in other HiPath 3000 communications platforms → page 86.

#### Saving the telephones for the ringing group:

Program/Service

Press the key. The LED lights up.

▶ \*81=Ringng group on? ✓

Select and confirm.

or

Enter the code.

Add to ringing group? ✓

Select and confirm

or

▶ Add another station? ✓

✓

or

▶ Display remove? ✓

Select and confirm, then follow the operating instructions.



Enter the call number.

▶ #=Entry complete? ✓

Confirm.

or

Enter

Save? ✓

Confirm.

▶ Exit? ✓

Select and confirm.

▶ Ringing group off? ✓

Select and confirm.

or

Enter the code.

#### Removing all telephones in call ringing group:

## Step by Step

## Controlling Relays

If this feature is configured (contact the service personnel), you can also control relays → page 74 in other HiPath 3000 communications platforms.

▶  ✓  
or

Select and confirm.

Enter the code.



Enter the (DISA) call number of the HiPath 3000 in which the relay is to be controlled.

✓ or

Confirm the entry.



Enter the (DISA) call number of the telephone from which you wish to control the relay.

✓ or

Confirm the entry.

▶  ✓  
or

▶  ✓

or

or

Enter the code for "on" or "off".

Enter the relay.

## Step by Step

### Opening the Door

If this feature is configured (contact the service personnel), you can also activate the door opener → page 21 in other HiPath 3000 communications platforms.



Select and confirm.

Enter the code.



Enter the (DISA) call number of the HiPath 3000 in which the door is to be opened.



 
Confirm the entry.



Enter the (DISA) call number of the telephone from which you wish to activate the door opener.



Confirm the entry.



Select and confirm.

Enter the code.



Enter the call number of the entrance telephone.

# Labeling and Documentation


## Labeling Key Fields

You can choose from the following options to label the keys with the functions/call numbers saved (→ page 8, → page 52):

### Labeling

- by hand:  
Labeling strips are delivered with your optiPoint. Write the function or a name on the matching strips within the white field and attach them to your optiPoint.
- with a computer:  
You have available a CD Rom (ask the service personnel) with the electronic operating instructions for your HiPath 3000 / 5000 RSM → page 96. You can label your keypads for each PC.
- with a computer via the Internet:  
You will find the "Online Key Labelling Tool" along with the user interface under <http://www.hipath.com> → "Downloads" → "Software".  
Special labeling sheets, which can be ordered, are available with the corresponding labeling strips for this procedure.  
Labeling sheets can be ordered from the details of the article number from Siemens' Sales Organisation or via the following internet address:  
<http://www.click4business-supplies.de>  
Article number-labeling sheets:  
A31003-H8400-B993-\*-6Z19  
for optiPoint basic/standard/advance paper size - DIN A4

Put the labeled strips in the relevant key pad on your optiPoint and place the transparent cover over them (mat page above).

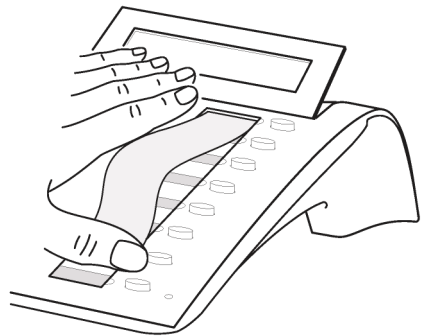

### Attaching a Station Number Label

Self-adhesive call-number labels are also delivered with your optiPoint.

Write on the call-number label (fire brigade, police, own telephone numbers), then remove and stick it in the recess on the telephone when the handset is lifted.

### Documentation

You can find these operating instructions in the Internet in PDF format under

<http://www.hipath.com>

and on CD-ROM (ask the service personnel) in HTML and PDF format.

The CD-Rom (7 languages) or a printout of these operating instructions can be ordered from the details of the article number from Siemens' Sales Organisation of via the following Internet address.

<http://www.click4business-supplies.de>

CD-ROM article number:

P31003-H3540-C140-\*-6Z19

Article number of these operating instructions:

A31003-H1012-C122-3-7619

In order to look at and print the operating instructions in PDF format, you need a computer on which the free Acrobat Reader software package is installed by Adobe.

To look at the operating instructions in HTML format you need a computer with a www browser, e.g. Microsoft Internet Explorer.

## Fixing Problems

### Telephone Maintenance

- Always use a damp or antistatic cloth to clean the telephone. Never use a dry cloth.
- If the telephone is very dirty, clean it with a diluted neutral cleaner containing surfactants, such as a dish detergent. Afterwards remove all traces of the cleaner with a damp cloth (using water only).
- Never use cleaners containing alcohol, cleaners that corrode plastic, or abrasive powders.

### Troubleshooting

#### **Pressed key does not respond:**

Check whether the key is stuck.

#### **Telephone does not ring:**

Check whether the do not disturb function was activated on your telephone ("Do not disturb" appears on the screen). If so, deactivate it → page 19.

#### **You cannot dial an external number:**

Check whether your telephone is locked ("US:Not authorized UK:Access denied" appears on the screen). If so, unlock the telephone → page 50.

#### **To correct any other problem:**

First contact your service personnel. If the service personnel is unable to correct the problem, contact Customer Service.

## Step by Step

**US: Invalid entry**

**UK: Incorrect entry**

### Responding to Error Messages on the Screen

**Possible cause:**

The station number is incorrect.

**Possible response:**

Enter a correct station number.

**US: Not authorized**

**UK: Access denied**

**Possible cause:**

You tried to activate a disabled function.

**Possible response:**

Ask the service personnel to authorize you to use the function.

**US: Currently not possible**

**UK: Feature not available**

**Possible cause:**

The station number you dialed does not exist. The telephone you are trying to call is unplugged.

**Possible response:**

Enter a correct station number. Try calling the telephone again later on.

**US: Invalid station number**

**UK: Number cannot be dialed**

**Possible cause:**

You dialed your own station number.

**Possible response:**

Enter a correct station number.

**US: Key memory is full**

**UK: Max.no.of keys exceeded**

**Possible cause:**

All memory locations for external station numbers are currently in use.

**Possible response:**

Try again later on.

### Contacts for Resolving Problems

If you encounter a problem that lasts longer than five minutes, contact the service personnel.

# Index

## A

- account code ..... 44
- activating door opener ..... 21
- advisory message ..... 65
- agents ..... 87
- announcement ..... 26
- answering a timed reminder ..... 17
- answering machine ..... 67
  - call pickup ..... 22
- appointment ..... 59
- assigning a DID number ..... 28
- assigning available keys ..... 52
- assigning programmable keys ..... 52
- associated dialing/dialing aid ..... 30
- Attention Ring Vol ..... 48
- automatic connection setup ..... 27
- automatic line seizure ..... 24

## C

- call
  - accepting from answering machine .... 22
  - accepting in a team ..... 82
  - accepting, group ..... 86
  - answering ..... 12
  - forwarding ..... 61
  - forwarding in a team ..... 79
  - forwarding MSN in CO ..... 63
  - in a team with trunk keys ..... 78
  - parking ..... 35
  - pickup, directed ..... 16
  - placing on hold ..... 36
  - rejecting ..... 16
  - retrieving from park ..... 35
  - retrieving held ..... 36
  - transfer ..... 82
  - transfer after announcement ..... 34
  - using DSS keys in a team ..... 81
- call charge assignment ..... 44
- call charges for another telephone ..... 42
- call charges for your telephone ..... 42
- call forwarding ..... 61
  - MSN in CO ..... 63
- call request ..... 37
- call signal ..... 12

- call transfer ..... 34
- call volume ..... 12, 49
- call waiting
  - accepting ..... 14
  - allowing ..... 15
  - preventing ..... 15
- call waiting (camp-on) ..... 46
  - tone off ..... 15
- call waiting on/off ..... 15
- call waiting tone on/off ..... 15
- caller ID
  - restoring display of
    - suppressing display of caller ID ..... 26
- caller ID suppression ..... 26
- calling
  - entrance telephone ..... 21
  - calling a second party ..... 31
- calls
  - distributing ..... 87
- calls in queue ..... 23, 87
- charges for another telephone ..... 42
- charges for your telephone ..... 42
- checking key assignments ..... 60
- cleaning the telephone ..... 97
- code dialing in ISDN ..... 72
- codes ..... 10
- conducting calls with a headset ..... 18
- conference ..... 31
- connection setup, automatic ..... 27
- consultation hold ..... 31
- contacts/problems ..... 98
- control panel
  - optiPoint 300 advance (HFA) ..... 8

## D

- deleting advisory messages ..... 65
- details, fax ..... 67
- dial input editing ..... 25
- dialing
  - en-bloc ..... 25
  - internal/external calls ..... 24
- dialing a number
  - from the caller list ..... 38
  - with repertory dialing keys ..... 41
- dialing aid
  - S0-bus ..... 30
- dialing Internal calls ..... 24

dialing numbers	
from the internal directory .....	40
using speed-dialing .....	41
direct inward system access (DISA) .....	70
direct station select .....	53, 55, 81
directory, internal .....	40
DISA .....	70
display angle .....	49
distributing calls .....	87
do not disturb .....	19
door opener .....	22

**E**

editing dial inputs .....	25
editing the station number .....	25
en-bloc .....	25
enhanced paging equipment .....	75
entrance telephone .....	21
error messages .....	98
executive/secretary functions .....	77
explanation of symbols .....	9
external code .....	24

**F**

fax details .....	67
forwarding .....	61
multiple subscriber number (MSN) .....	63
forwarding MSN in CO .....	63
forwarding multiple subscriber number (MSN) .....	63
function keys .....	10
functions	
activating/deactivating for another telephone associated service .....	69
programming on keys .....	54
resetting .....	67

**G**

group call .....	84
in a team .....	82

**H**

handsfree answerback .....	18
off .....	18
on .....	18
headset .....	18
HiPath AllServe	
actuators .....	93
door opener .....	94
group call .....	89
hunt group .....	89
night answer .....	91
relays .....	93
ringing group .....	92
transferring call forwarding .....	90
hotline .....	27
HTML format .....	96
hunt group .....	84

**I**

internal directory .....	40
IP telephony .....	89

**K**

key fields, labeling .....	8, 95
keypad dialing .....	72
keys	
assigning .....	52
fixed .....	8
incomplete save .....	54
labeling .....	95
programmable .....	8

**L**

labeling key fields .....	8, 95
LAN telephony .....	89
leaving an advisory message .....	65
LED (light-emitting diode) .....	8
LED indications, meaning of .....	77, 80, 81
LED signals, meaning .....	55
locking all phones .....	70
locking/unlocking the telephone .....	50

- M**
- mailbox ..... 17
  - making calls
    - on-hook dialing ..... 24
    - to stored destinations ..... 37
    - using redial ..... 39
    - with the dialing aid ..... 30
  - making external calls ..... 24
  - making trunk calls ..... 24
  - malfunctions ..... 97
  - marks ..... 2
  - meaning of LED Indications ..... 77
  - meaning of LED indications ..... 80, 81
  - meaning of LED signals ..... 55
  - message
    - answering ..... 64
    - deleting/displaying ..... 64
    - receiving ..... 64
    - sending ..... 64
  - MULAP keys ..... 77
  - MULAP trunk keys ..... 77
- N**
- night answer ..... 62
  - notes ..... 2
- O**
- open door
    - with a code ..... 22
  - open listening ..... 13
  - opening door ..... 21
  - operating instructions
    - HTML format ..... 96
    - ordering ..... 96
    - PDF format ..... 96
  - operating principle ..... 10
  - operating steps
    - assigning to a key ..... 57
  - operating systems ..... 9
  - overload ..... 23
  - override ..... 47
- P**
- parking a call ..... 35
  - PDF format ..... 96
  - personal identification number ..... 51
  - pickup (call) ..... 16, 86
  - PIN ..... 51
    - for a telephone ..... 50
  - placing a call on hold ..... 36
    - in a team ..... 78
  - preventing and allowing
    - automatic camp-on ..... 15
    - prime line on ..... 24
    - problems/contacts ..... 98
    - procedure
      - assigning to a key ..... 57
  - Program/Service ..... 10
  - programming available keys ..... 52
  - programming keys ..... 52
  - programming your telephone ..... 48
  - project calls ..... 44
- R**
- radio paging equipment PSE ..... 75
  - recall ..... 35
  - receiving volume ..... 12, 49
  - redialing a number ..... 39
    - from the caller list ..... 38
  - relays ..... 74
  - reserving a trunk ..... 28
  - resetting functions ..... 67
  - resetting services ..... 67
  - ring tone ..... 48
  - ring transfer
    - in an executive/secretary team ..... 83
  - ring volume ..... 48
  - ringer cutoff ..... 19
  - ringing group ..... 86
  - room monitor ..... 68
- S**
- saving a PIN ..... 51
  - second level ..... 41, 52
  - secretary functions ..... 77
  - sensors ..... 74
  - setting your telephone ..... 48
  - Shift ..... 41, 52
  - Shift key ..... 41, 52
  - simple paging equipment ..... 75
  - speaker ..... 12

speaker call .....	26
speakerphone mode .....	12, 13, 14, 49
special dial tone .....	19
speed-dialing	
dialing numbers .....	41
saving station speed-dialing .....	53
system .....	41
station number	
assigning .....	28
correcting .....	25
saving .....	52
station speed-dialing .....	41, 53
suffix-dialing .....	27
switches .....	74
system speed-dialing .....	41
system-wide cancellation .....	67

**T**

team with trunk keys .....	77
telephone	
cleaning .....	97
locking .....	50
locking another .....	70
locking/unlocking .....	50
locking/unlocking all phones .....	70
maintaining .....	97
operating .....	10
settings .....	48
testing .....	60
using another like your own .....	66
telephone data service .....	73
telephone maintenance .....	97
telephone test .....	60
temporary phone .....	66
testing the telephone .....	60
testing the telephone functions .....	60
text message	
answering .....	64
deleting/displaying .....	64
receiving .....	64
sending .....	64
three-party conference .....	31
time-dependent hotline .....	27
toggle .....	31
toggle/connect	
in the team .....	79
tone dialing .....	27

tone dialing (DTMF dialing) .....	27
trace call .....	20
transfer (call) .....	82
after announcement .....	34
transfer call .....	34
trunk flash .....	29
trunk keys in a team .....	77
trunk keys, MULAP .....	77
trunk, reserving .....	28

**U**

UCD .....	87
using a caller list .....	37
using a temporary phone .....	66
using functions from the outside .....	70

**V**




variable call forwarding .....	61
--------------------------------	----

**W**




waiting calls .....	23
work time .....	88

## Overview of Functions and Codes (Alphabetical)




The table below lists all available functions as they appear on the display. Functions that have been configured (contact System Support) can be activated interactively (select + save) via the Program/Service menu (select + save or enter a code), or by pressing function keys, provided that the functions have been configured (contact System Support).

Functions (display)	... Inter-actively 	... Via the Program/Service menu 		... With function keys
			Code	
Account code		✓	*60	X
Advisory msg. on	✓	✓	*69	X
Advisory msg. off	✓	✓	#69	X
Associated dial		✓	*67	X
Associated serv.		✓	*83	X
Call waiting	✓	✓	*55	X
Waiting tone off	✓	✓	*87	X
Waiting tone on	✓	✓	#87	X
Call wait.term.on		✓	*490	X
Call wait.trm.off		✓	#490	X
Caller List	✓	✓	#82	X
Save number	✓	✓	*82	X
Changeover on	✓	✓	*66	X
Changeover off	✓	✓	#66	X
Change PIN		✓	*93	
Conference	✓	✓	*3	X
Start conference	✓			
Adding a party to the conference	✓			
End conference	✓	✓	#3	
View conf parties	✓			
Remove party	✓			
Drop last conf. party (only for U.S.)			*491	
Consult	✓			
Return to held call	✓	✓	*0	
Quit and return	✓	✓	*0	
Transfer/US:Accept call UK:Accept	✓			
Control Relay On		✓	*90	X
Control Relay Off		✓	#90	X
US:Directory UK:Phonebook	✓			X
DISA				
Internal DISA	✓	✓	*47	X
En-bloc sending				
Dial	✓			



## Overview of Functions and Codes (Alphabetical)

Functions (display)	... Inter-actively 	... Via the Program/Service menu 		... With function keys
			Code	
DND on	✓	✓	*97	X
DND off	✓	✓	#97	X
Door opener on		✓	*89	X
Door opener off		✓	#89	X
DTMF dialing		✓	*53	X
Forwarding on	✓	✓	*1	X
1=all calls	✓	✓	*11	X
2=external calls only	✓	✓	*12	X
3=internal calls only	✓	✓	*13	X
Forwarding off	✓	✓	#1	X
Trunk FWD on	✓	✓	*64	X
Trunk FWD out	✓	✓	#64	X
Forward Line: On		✓	*501	X
Forward Line: Off		✓	#501	X
Headset				
Answer call	✓			
HF answerback on	✓	✓	*96	X
HF answerback off	✓	✓	#96	X
Hotline				
Join hunt group	✓	✓	*85	X
Leave hunt group	✓	✓	#85	X
Rejoin all groups	✓	✓	*85*	X
Leave all groups	✓	✓	#85#	X
Lock all phones		✓	*943	X
Mute on	✓	✓	*52	X
Mute off	✓	✓	#52	X
Night answer on	✓	✓	*44	X
Night answer off	✓	✓	#44	X
Open door		✓	*61	X
Override	✓	✓	*62	X
Page		✓	*45	X
Answer page (not for U.S.)		✓	#45	X
Park a call		✓	*56	X
Retrieve call		✓	#56	X

## Overview of Functions and Codes (Alphabetical)

Functions (display)	... Inter-actively 	... Via the Program/Service menu 		... With function keys
			Code	
Phone Test		✓	*940	
Pickup - directed		✓	*59	X
Pickup - group	✓	✓	*57	X
Accept call	✓			
Prog. feature key		✓	*91	X
Redial				X
Reject call				
Release				X
Reserve trunk	✓			X
Reset services		✓	#0	X
Retrieve line		✓	*63	X
Ring Transfer: On		✓	*502	X
Ring Transfer: Off		✓	#502	X
Ringer cutoff on	✓	✓	*98	X
Ringer cutoff off	✓	✓	#98	X
Ringling group on		✓	*81	X
Ringling group off		✓	#81	X
Room monitor		✓	*88	X
Select language		✓	*48	
Send message	✓	✓	*68	X
View sent message	✓	✓	#68	X
US: View messages UK: Display Messages	✓	✓	#68	X
Mailbox				X
Keypad dialingI		✓	*503	
Shift Key				X
Show call charges (own telephone)		✓	*65	X
View call charges (other party's telephone)				X
Speaker call		✓	*80	X
Suppress call ID	✓	✓	*86	X
Restore caller ID	✓	✓	#86	X
Tel. data service			*42	
Temporary MSN (not for U.S.)	✓	✓	*41	X
Temporary Phone		✓	*508	X
Timed reminder on		✓	*46	X
Timed reminder off		✓	#46	X
Toggle/Connect	✓	✓	*2	X

## Overview of Functions and Codes (Alphabetical)

Functions (display)	... Inter-actively 	... Via the Program/Service menu 		... With function keys
		Program/Service	Code	
Trace call		✓	*84	X
Transfer	✓			
Trunk Flash		✓	*51	X
UCD		✓		
Log on		✓	*401	X
Log off		✓	#401	X
Available		✓	*402	X
Not available		✓	#402	X
Work on		✓	*403	X
Work off		✓	#403	X
UCD night on		✓	*404	X
UCD night off		✓	#404	X
Calls in queue		✓	*405	X
US:Callback UK:Set Callback	✓	✓	*58	X
View callbacks/Delete	✓	✓	#58	
Use speed-dialing		✓	*7	X
Change Speed-dial (station)		✓	*92	X



[www.hipath.com](http://www.hipath.com)



© Siemens AG 2003  
Information and Communication Networks  
Hofmannstr. 51 • D-81359 Munich

**Ref. No.: A31003-H1012-C122-3-7619**

The information provided in this document contains merely general descriptions or characteristics of performance which in case of actual use do not always apply as described or which may change as a result of further development of the products.

An obligation to provide the respective characteristics shall only exist if expressly agreed in the terms of contract.

Subject to availability. Right of modification reserved.  
Printed in the Federal Republic of Germany.

27.02.2003